



## Mounting Instructions

### Husqvarna HU/LC Series Lawn Mower




#### Important

Big League Lawns, LLC warrants their products to be free of defects in material and workmanship. This warranty does not cover defects due directly or indirectly to misuse, abuse, normal wear and tear, failure to properly maintain the product or used for a purpose other than that for which it is intended. The duration of this warranty is expressly limited to one year parts and labor beginning from the date of delivery to the original customer.

The obligation of Big League Lawns, LLC is limited solely to the repair or replacement, at our option, at its factory or authorized repair agent of any part that should prove deficient. Purchaser must maintain the product under normal operating conditions at all times. Prior to operation, become familiar with the attachment and any disconnect features. This product is not intended to be used in a transport position or to be backed over curbs. When not in use, the product should be removed from the mower and transported in a safe manner. Failure to follow these instructions will void the warranty.

**For Reference: The LC Model Installed. The LC and HU series mowers have slightly different handle bar brackets, instructions should be followed the same way for either model.**

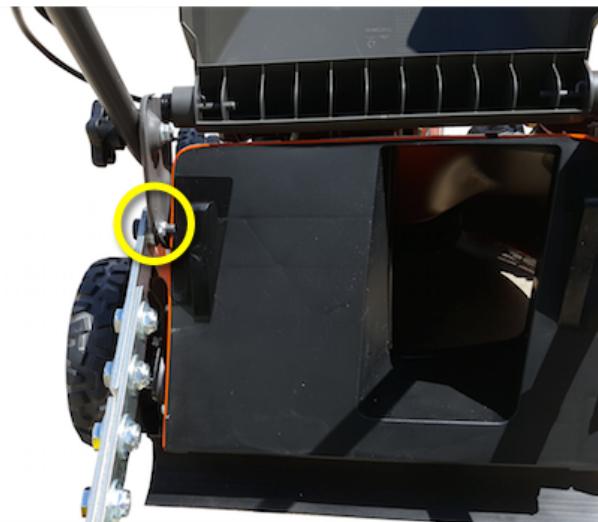

## Required Hardware:

---

- **3/4" Socket/Wrench**
- **3/16" Socket/Wrench**
- **1/2" Socket/Wrench**
- **1/8" Allen Wrench**

## Step 1: Clearing mounting area

---


Remove the bagger and set the wheel height adjustment levers to the highest or forward most setting.



## Step 2: Assembling mounting arms

---

Assemble the mounting arms with the hardware included in your kit. Follow the schematic below for the correct setup.

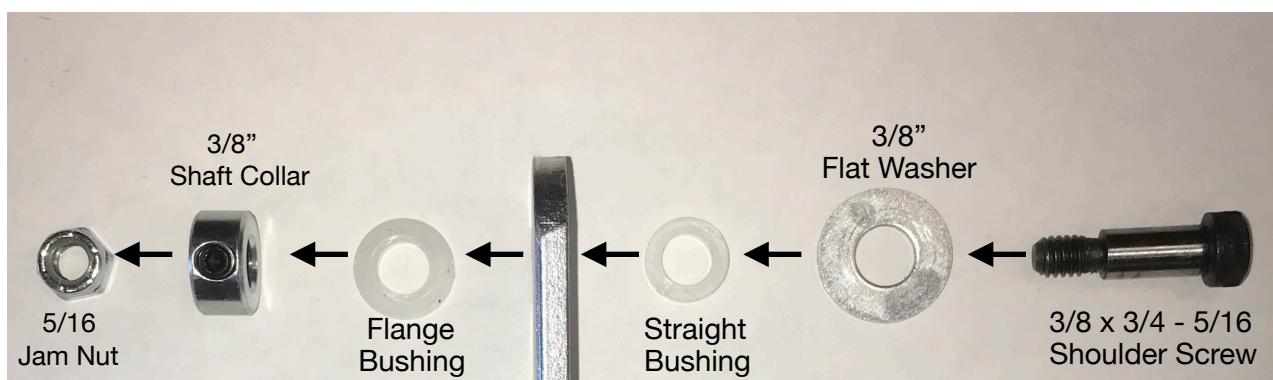

### Step 3: Mounting arms to the machine

---

Thread the end of the shoulder screw into the existing hole in the mower bracket. Attach one of the 5/16" locknuts and secure the mounting arm to the machine.

**\*Note: the mounting arms need to be able to freely pivot up and down, if too tight, they will not be able to pivot**



### Step 4: Install Kit

---

Remove the 1/2" x 1" bolt and 1/2" lock washer from the channel nuts located in the top side of the grey channel. Align the channel with the mounting brackets. Place the 1/2" x 1" bolt and 1/2" lock washer through the brackets and thread them back into the 1/2" channel nuts.

**\*Note: only finger tighten the bolts as you will need to adjust the striping kit in the next step.**



### Step 5: Adjusting the kit

---


Adjust the striping kit so that it is centered behind the mower and each mounting arm is at the end of the grey channel. Once the striping kit is centered, use your 3/4" wrench or socket to tighten the bolts.



### Step 6: Checking kit

---

Check to make sure that the striping kit can move up and down without interfering with the function of the mower.

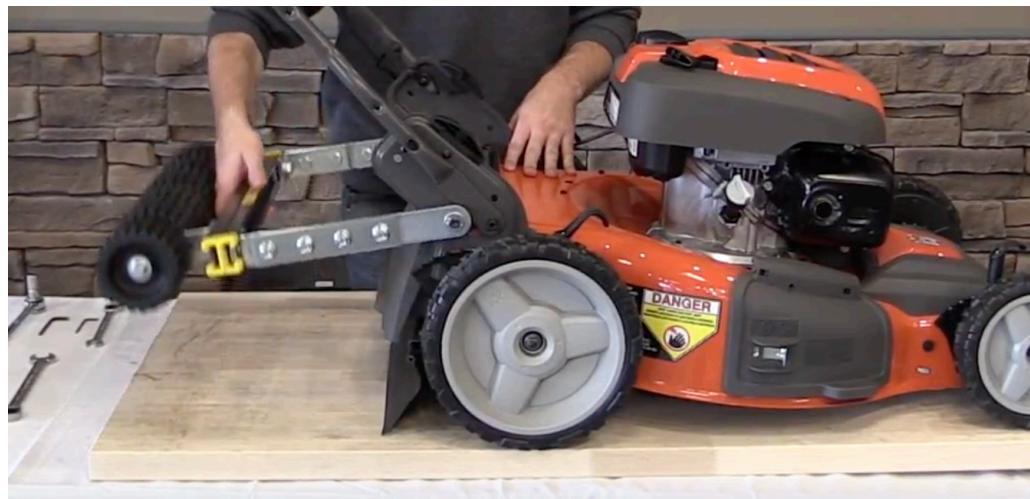

### Step 7: (Optional) Reinstall bagger

---

Reinstall your bagger and reset your wheel height adjustment levers to your normal mowing setting.



### Step 8: Finished installation

---

Enjoy striping with your new CheckMate™ Striping Kit!

