



CheckMate™ Lawn and Athletic Field Striping Kits

1161 E. Clark Road, Suite #220

◆ DeWitt, MI 48820

◆ 800.411.0150

www.bigleaguelawns.com



CheckMate™ Ferris Zero Turn Lawn Striping Kit Installation Guide

Important

Big League Lawns, LLC warrants their products to be free of defects in material and workmanship. This warranty does not cover defects due directly or indirectly to misuse, abuse, normal wear and tear, failure to properly maintain the product or used for a purpose other than that for which it is intended. The duration of this warranty is expressly limited to one year parts and labor beginning from the date of delivery to the original customer.

The obligation of Big League Lawns, LLC is limited solely to the repair or replacement, at our option, at its factory or authorized repair agent of any part that should prove deficient. Purchaser must maintain the product under normal operating conditions at all times. Prior to operation, become familiar with the attachment and any disconnect features. This product is not intended to be used in a transport position or to be backed over curbs. When not in use, the product should be removed from the mower and transported in a safe manner. Failure to follow these instructions will void the warranty.



US Patent 6,962,039 B2, US Patent 6,993,894 B2

Congratulations on your new purchase! You are just steps away from creating a beautifully patterned lawn using your new CheckMate™ lawn striping roller. To ensure a long life of both your mower and roller, please be sure to follow the mounting recommendations below.



If you should have any questions regarding the use of a particular mounting method, please do not hesitate to contact us at 800.411.0150 or via email at sales@bigleaguelawns.com.

Important: If you purchased your striping kit through a 3rd party vendor and have any questions regarding your mounting options, please do not hesitate to contact us. We have a great wealth of knowledge, tips and tricks, which may be helpful. Unfortunately, when we receive purchase orders via 3rd party vendors we do not know in advance what mower the roller is being attached to.

Thank you,

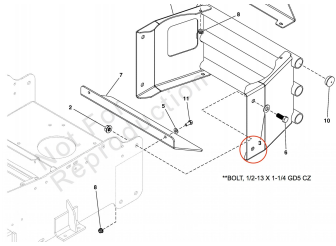
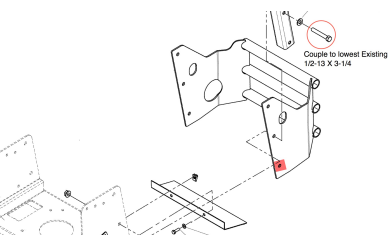
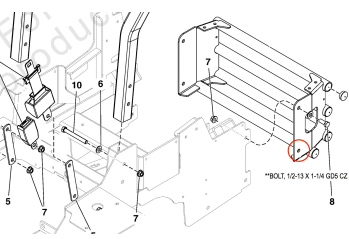
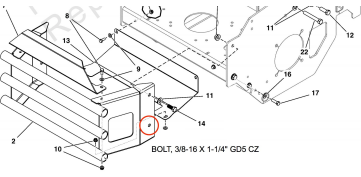
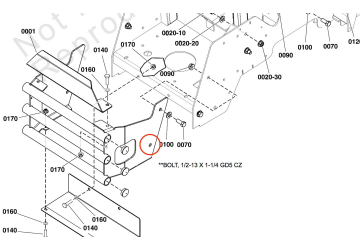
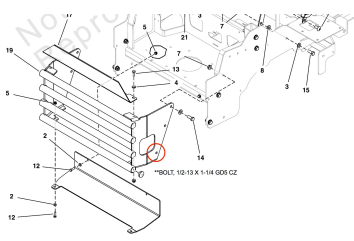
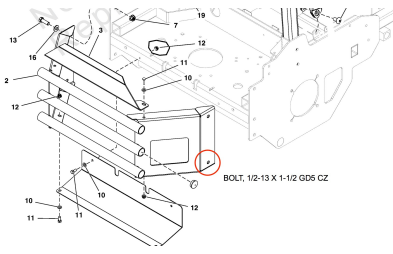
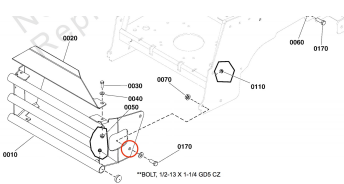
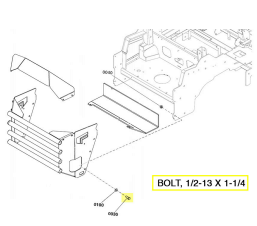
Big League Lawns, LLC

When Mowing Isn't Enough... Let it Roll!

US Patent 6,962,039 B2

US Patent 6,993,894 B2

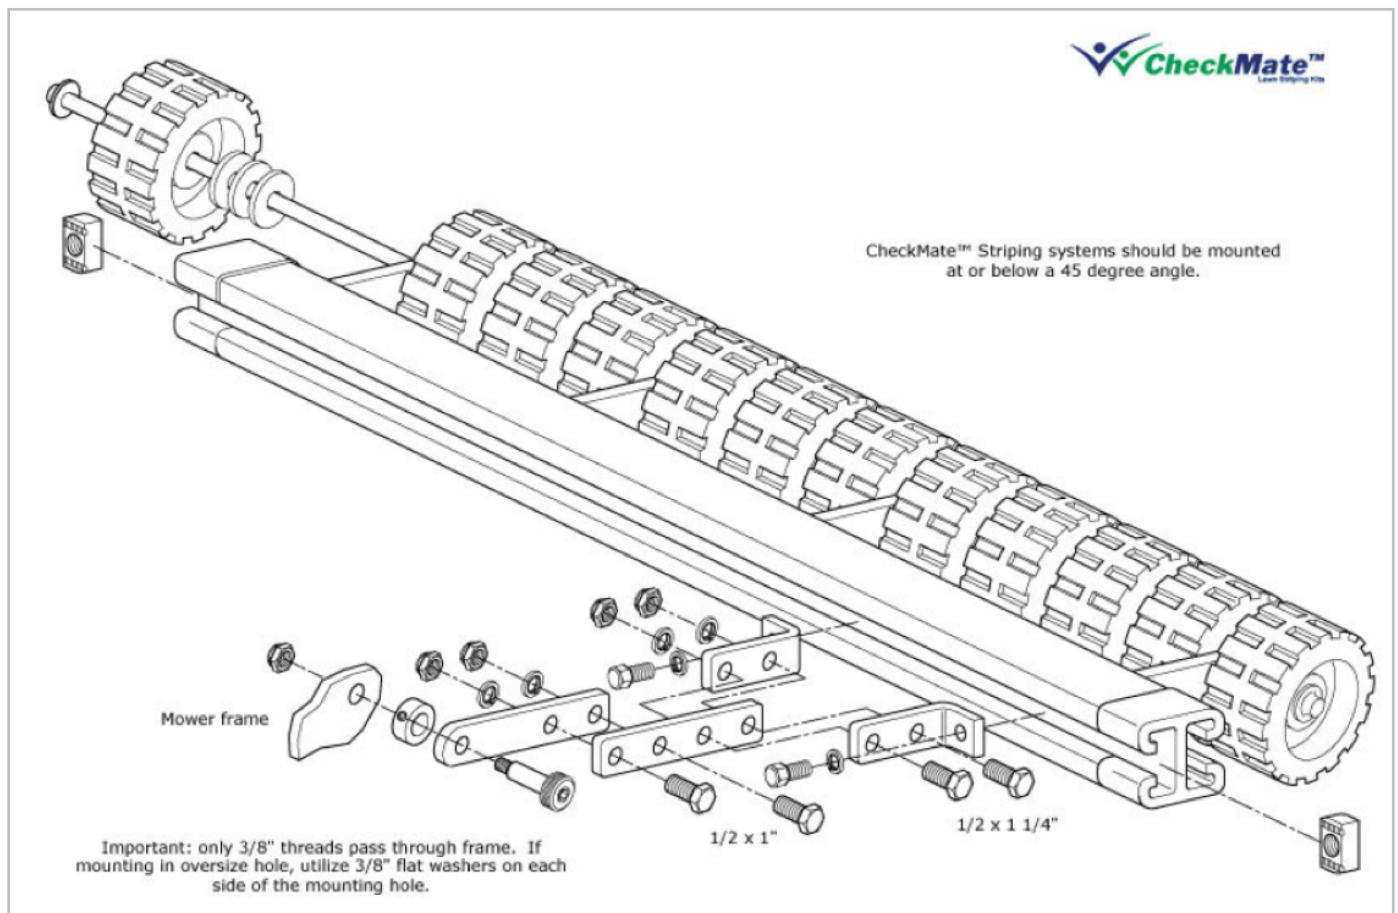
FEIN 38-3198349

Ferris F-Z Series	IS-Z Series	
<p data-bbox="375 495 440 527">F60Z</p> 	<p data-bbox="781 495 870 527">IS500Z</p> 	<p data-bbox="1179 495 1279 527">IS2600Z</p> 
<p data-bbox="367 894 448 926">F160Z</p> 	<p data-bbox="735 894 919 926">IS600Z/IS700Z</p> 	<p data-bbox="1179 894 1279 926">IS3200Z</p> 
<p data-bbox="342 1352 472 1383">F210/320Z</p> 	<p data-bbox="773 1352 878 1383">IS2100Z</p> 	<p data-bbox="1179 1352 1279 1383">IS3300Z</p> 

Mounting Option D

You will want to follow the schematic below to assemble your mounting arms.

[Note: Schematic shows only one of two arms you will have to assemble. Simply repeat the process for the assembly of your second mounting arm.]



Coupling Process

The coupling process is identical for all mowers, regardless of model or type.

All Zero Turn Ferris frames have existing 1/2" x 1" bolts that will need to be reversed so that the bolts' threads will be facing away from your mower on each side.

From there you can thread your provided coupler nut on to your mower's existing bolt using the 1/2" side of the coupler; the provided pivot bolts will then thread into the 3/8" side of the coupler nut. (Reference photo guide below)

NOTE: Ferris IS500Z Mounting bolt is the bottom most ROPS bar bolt.

(1) Acquire Hole



(2) Install bolt



(3) Add lock washer



(4) Tighten coupler nut



(5) Thread pivot bolt



(6) Tighten pivot bolt



Installation is now complete! Enjoy your striping with your new CheckMate™ Striping kit!