



Mounting Instructions MTD® Manufactured Walk Behind Mowers



Important

Big League Lawns, LLC warrants their products to be free of defects in material and workmanship. This warranty does not cover defects due directly or indirectly to misuse, abuse, normal wear and tear, failure to properly maintain the product or used for a purpose other than that for which it is intended. The duration of this warranty is expressly limited to one year parts and labor beginning from the date of delivery to the original customer.

The obligation of Big League Lawns, LLC is limited solely to the repair or replacement, at our option, at its factory or authorized repair agent of any part that should prove deficient. Purchaser must maintain the product under normal operating conditions at all times. Prior to operation, become familiar with the attachment and any disconnect features. This product is not intended to be used in a transport position or to be backed over curbs. When not in use, the product should be removed from the mower and transported in a safe manner. Failure to follow these instructions will void the warranty.

Tools Required: For this installation you will need the following tools.

3/4" Wrench or socket, 3/16" Allen Wrench, 1/8" Allen Wrench, 1/2" Wrench or socket.





Step 1: Remove Bagging Unit

Remove the bagger and set the wheel height adjustment levers to the highest or forward most setting.



Step 2: Remove Rear Skirt

Remove rear skirt by flipping it up and pulling from the middle. It will release from the existing holes.

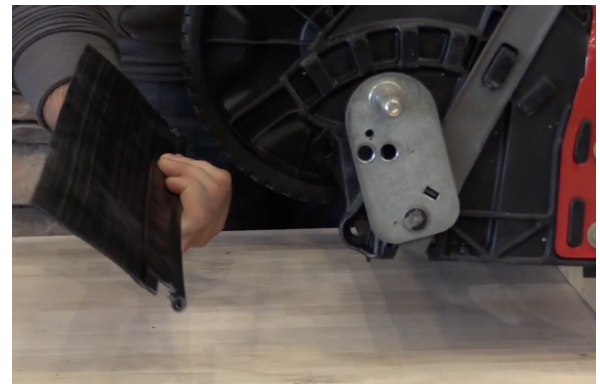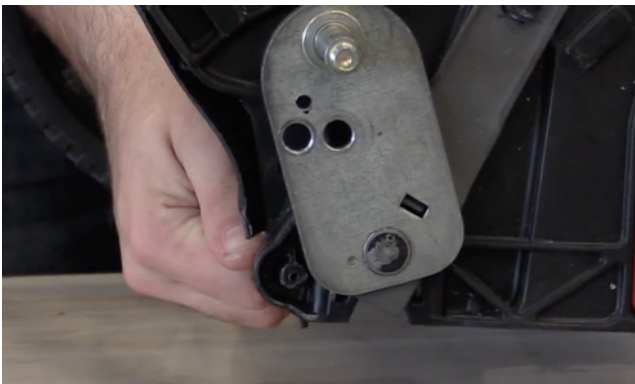

Step 3: Remove Tire

Remove 3/8" Locknut and take off tire.




Step 4: Prepare Hardware

Note* nylon bushings will need to be stacked for the next step. **(IMPORTANT: Please coat your pivot bolt threads with the supplied Blue Loctite during installation. Let sit for 1-2 Hours prior to mowing to allow the Loctite to bond)**



Step 5: Align Bracket with Mounting Location

Stack (3) nylon bushings within the recessed area aligning with the rear skirt hole. Align mounting arm bracket and prepare to install mounting bolt in the next step.

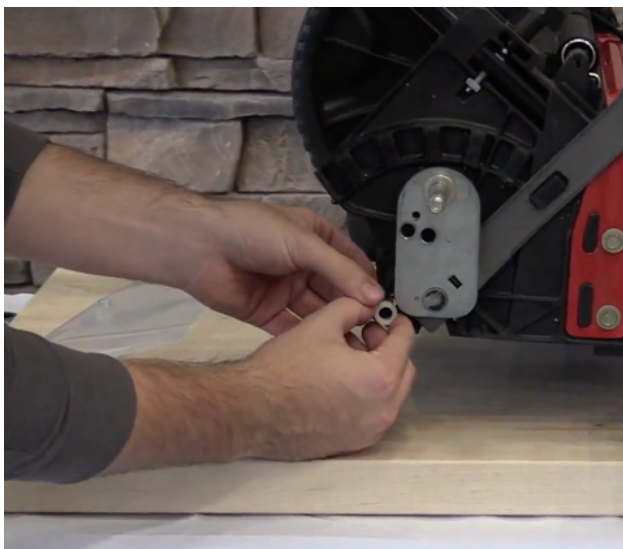


Step 6: Secure Bracket

Place one 3/8" nylon bushing onto the shaft of the connector nut. Place the connector nut through the mounting arm; the three stacked nylon bushing and then through the mower frame itself. Secure in place with the 1/4" locking bolt on inside.



Step 7: Repeat Process

Repeat steps 1-6 on opposite side and line up striping kit with brackets.

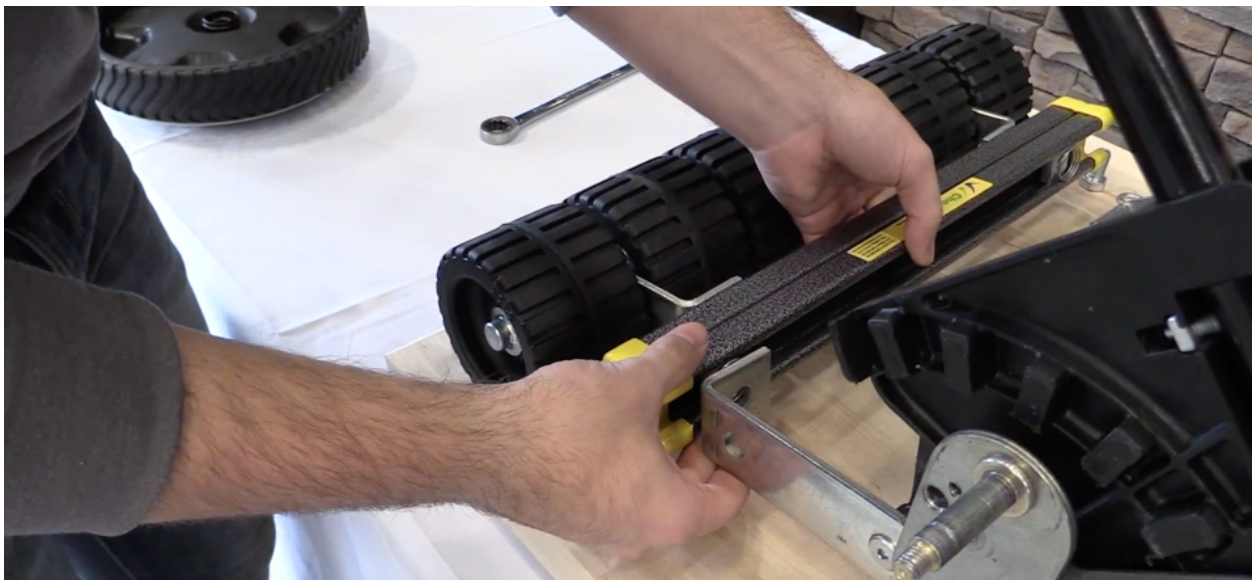

Step 8: Install Roller to Mounting Brackets

Remove 1/2" bolts and lock washers from the striping kit and re-attach through mounting arm brackets back into the spring loaded channel nuts. Note, the channel nuts slide up and down the inside of the gray rail.



Step 9: Re-Attach Tire

Re-attach wheels with 3/8" locknut and replace hubcap.



Step 10: Replace Bagging Unit

Optional Replace bagging unit if desired.



Step 11: Finished Installation

Enjoy Striping with your new CheckMate™ Striping Kit!

