



US Patent 6,962,039 B2, US Patent 6,993,894 B2

Mounting Instructions

Husqvarna 7021P Mower



Important

Big League Lawns, LLC warrants their products to be free of defects in material and workmanship. This warranty does not cover defects due directly or indirectly to misuse, abuse, normal wear and tear, failure to properly maintain the product or used for a purpose other than that for which it is intended. The duration of this warranty is expressly limited to one year parts and labor beginning from the date of delivery to the original customer.


The obligation of Big League Lawns, LLC is limited solely to the repair or replacement, at our option, at its factory or authorized repair agent of any part that should prove deficient. Purchaser must maintain the product under normal operating conditions at all times. Prior to operation, become familiar with the attachment and any disconnect features. This product is not intended to be used in a transport position or to be backed over curbs. When not in use, the product should be removed from the mower and transported in a safe manner. Failure to follow these instructions will void the warranty.

Step 1: Safely prop up your mower and remove bagger

Using a block of wood or other method safely prop the rear end of the mower up, then remove your bagger (if installed) to gain access to the mounting location.

Step 2: Remove the rear wheels

Using a 9/16 wrench or socket remove the rear wheel nuts by turning them counter clockwise. Once the nuts are removed you can pull the wheels off and now have clear access to the mounting location.

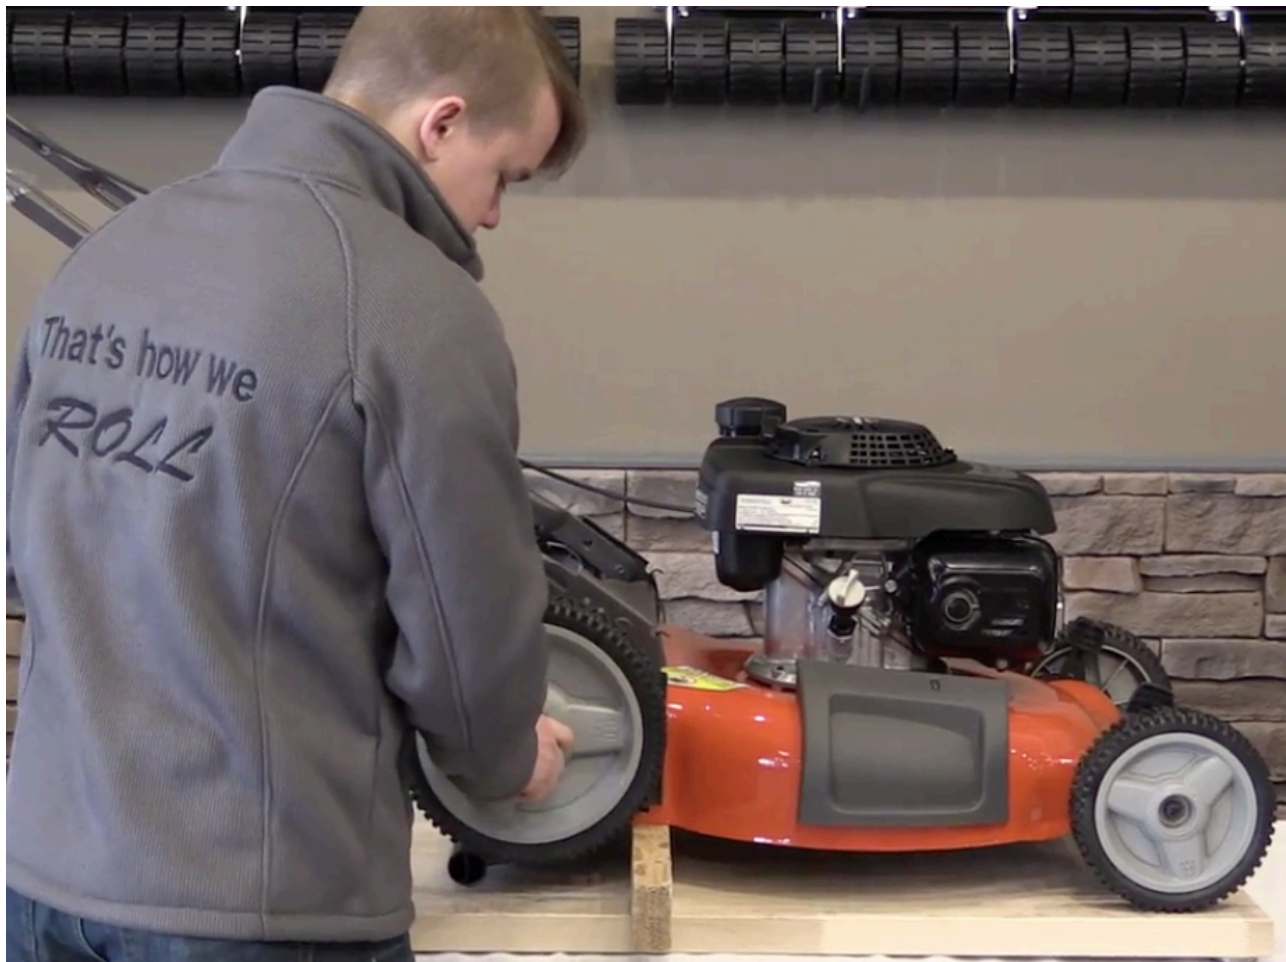

Step 3: Remove rear skirt

Using a 3/8 wrench or socket remove the bolt securing your rear skirt, the skirt should be able to be slid off of the second bolt once released.



Step 4: Prepare the mounting arms to connect

Partially disassemble the supplied mounting arms by unscrewing the spinning lock nut from the joint connector bolt while keeping the joint connector bolt and nylon washers in their original location.




Step 5: Connect the mounting arms

Take the now disassembled spinning lock nut, and thread it through the existing rear skirt holes from the inside out. Once threaded through, connect to joint connector while keeping the nylon washers in place. Tighten securely.




Step 6: Install kit

Connect the bottom of the mounting arms to the kit using the supplied bolts, lock washers and channel nuts. Once connected, center the kit behind your mower before tightening the bolts into their final position.

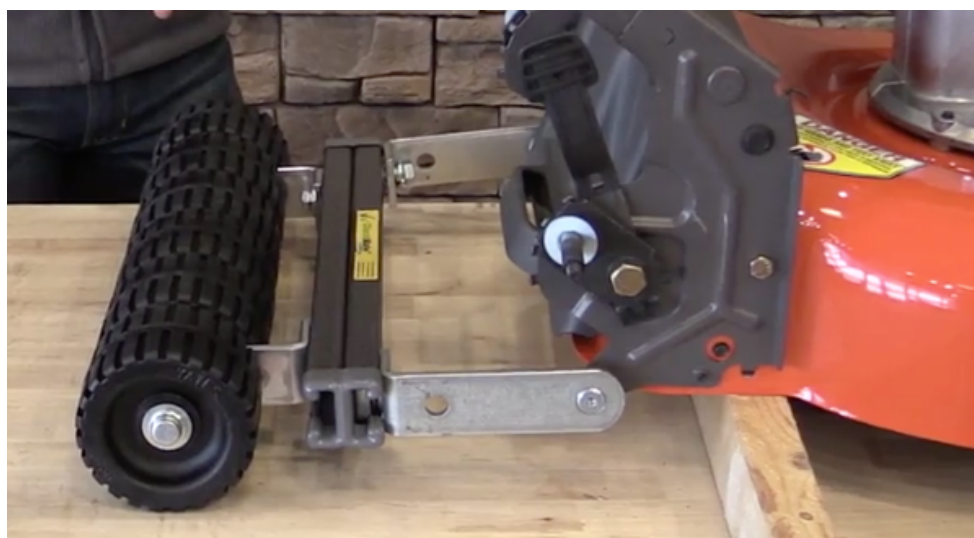

Step 7: Reinstall wheels

Secure the wheels to the mower again (reverse Step 2)

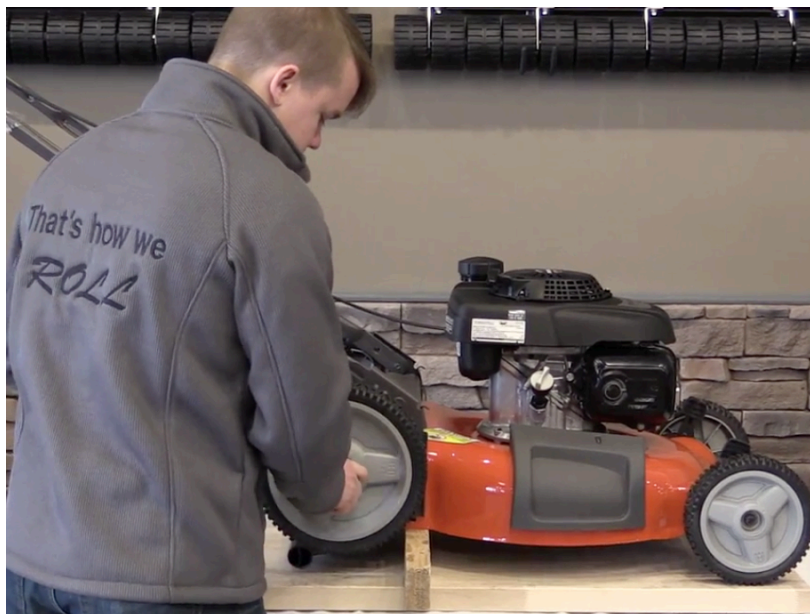

Step 8: (Optional) Reinstall bagger



Step 9: Finished installation

Enjoy striping with your new CheckMate™ Striping Kit!

