



CheckMate™ Lawn and Athletic Field Striping Kits

1161 E. Clark Road, Suite #220



DeWitt, MI 48820



800.411.0150

www.bigleaguelawns.com



CheckMate™ Lawn Striping Kit For Toro FWD Recycler Installation Guide

Important

Big League Lawns, LLC warrants their products to be free of defects in material and workmanship. This warranty does not cover defects due directly or indirectly to misuse, abuse, normal wear and tear, failure to properly maintain the product or used for a purpose other than that for which it is intended. The duration of this warranty is expressly limited to one year parts and labor beginning from the date of delivery to the original customer.

The obligation of Big League Lawns, LLC is limited solely to the repair or replacement, at our option, at its factory or authorized repair agent of any part that should prove deficient. Purchaser must maintain the product under normal operating conditions at all times. Prior to operation, become familiar with the attachment and any disconnect features. This product is not intended to be used in a transport position or to be backed over curbs. When not in use, the product should be removed from the mower and transported in a safe manner. Failure to follow these instructions will void the warranty.




US Patent 6,962,039 B2, US Patent 6,993,894 B2

Mounting Instructions Toro Recycler FWD Series Mowers


Congratulations on your new purchase! You are just steps away from creating a beautifully patterned lawn using your new CheckMate™ lawn striping roller. To ensure a long life of both your mower and roller, please be sure to follow the mounting recommendations below.

Tools Required:

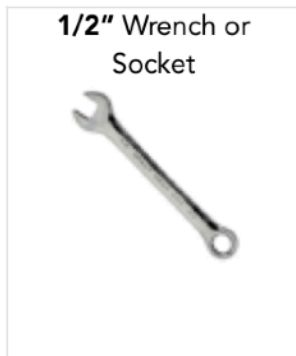

Before Installation Process

Safely prop up the rear end of your mower and remove the bagger from the mower.

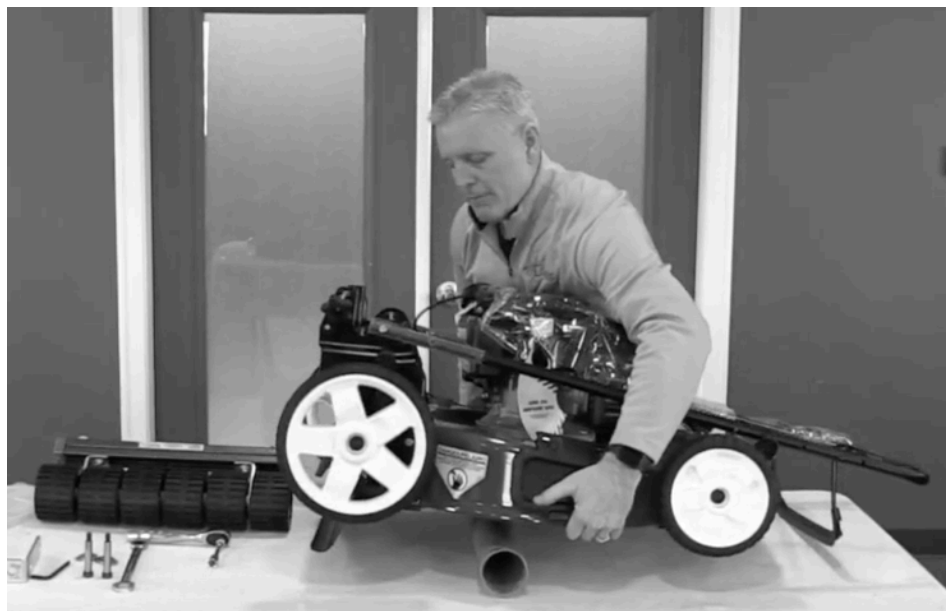

Step 1: Remove Existing Axel Bolt

Using a 1/2" socket or wrench, turn the axel bolt counter clockwise to remove the wheel from the mower. Remove the axel bolt from the wheel.



Step 2: Install New Shoulder Bolt

Place a 7/16" flat washer on the outside of the tire and insert the newly provided axel bolt.



Step 3: Attach Mounting Bracket and Mount Tire

Place another 7/16" flat washer on the inside of the tire to prevent the mounting bracket from rubbing on the metal. Now place the mounting bracket itself onto the shoulder bolt, then one final 7/16" flat washer.



Step 4: Attach Shoulder Bolt to Mower.

Using your 1/4" hex key, tighten the shoulder bolt into the height adjustment plate. *Make sure that the inside flat washer is on the shoulder of the shoulder bolt and will not prevent the bolt from being tightened.




Step 5: Repeat Steps 1-4 on Opposite Side of the Mower

Step 6: Assemble Mounting Arms

Utilize Schematic

Please utilize the schematic and photo below to assemble your mounting arms to the grey channel piece.

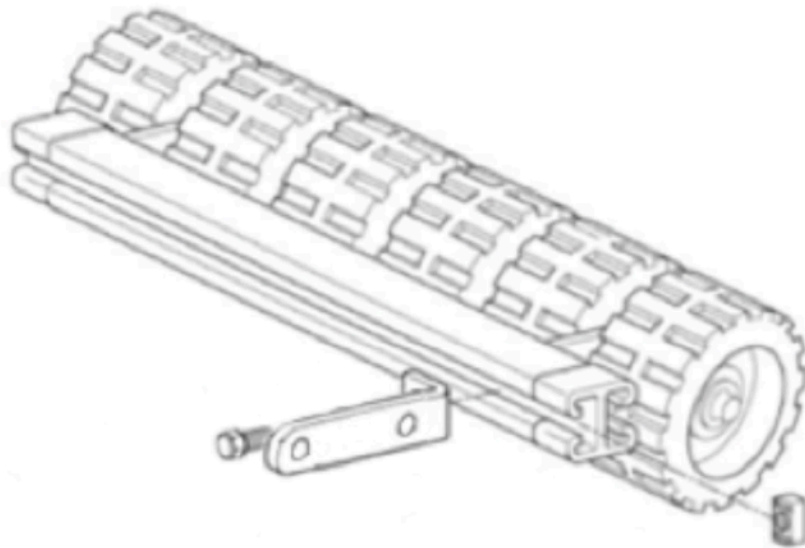

Step 7: Install Striping Kit

Remove preinstalled 1/2" x 1" bolts and lock washers from gray channel. Re-insert the bolt [with split lock washer] through the L shaped bracket and thread into the channel nut inside channel. **(Before tightening bolts all the way down; center roller behind the mower)**

After centering the roller; use a 3/4" wrench to firmly tighten each mounting arm to the striping roller.



Final Steps

Check installation, pick up the roller to confirm it freely pivots up and down. Also reinstall bagger to mower if desired.



*Disclaimer: Alternate mower used for example purposes.



Installation is now complete! Enjoy striping with your new CheckMate™ Striping kit!

If you have any questions or concerns, feel free to reach out to us!

Phone: (800) 411-0150

Email: sales@bigleaguelawns.com