



CheckMate™ Lawn and Athletic Field Striping Kits

1125 Mak-Tech Dr. Suite C

Lansing, MI 48906

800.411.0150

www.bigleaguelawns.com



CheckMate™ Lawn Striping Kit Installation Guide: Bad Boy Zero Turns

Important

Big League Lawns, LLC warrants their products to be free of defects in material and workmanship. This warranty does not cover defects due directly or indirectly to misuse, abuse, normal wear and tear, failure to properly maintain the product or used for a purpose other than that for which it is intended. The duration of this warranty is expressly limited to one year parts and labor beginning from the date of delivery to the original customer.

The obligation of Big League Lawns, LLC is limited solely to the repair or replacement, at our option, at its factory or authorized repair agent of any part that should prove deficient. Purchaser must maintain the product under normal operating conditions at all times. Prior to operation, become familiar with the attachment and any disconnect features. This product is not intended to be used in a transport position or to be backed over curbs. When not in use, the product should be removed from the mower and transported in a safe manner. Failure to follow these instructions will void the warranty.



US Patent 6,962,039 B2, US Patent 6,993,894 B2

Congratulations on your new purchase! You are just steps away from creating a beautifully patterned lawn using your new CheckMate™ lawn striping roller. To ensure a long life of both your mower and roller, please be sure to follow the mounting recommendations below.

Please note the following prior to installing your new CheckMate™ Striping System:

- All units ship with two 1/2" x 1" pivot bolts; each bolt contains 3/8" threads. Proper mounting of this bolt requires that only the threaded portion of this bolt pass through its' mounting hole or connect to the included coupler. Allowing the smooth 1/2" portion of this bolt to also pass through the mower frame will restrict the roller from pivoting properly.
- If mounting in an oversize hole, simply install one 3/8" flat washer on both the inside and outside of the frame to restrict the 1/2" portion of this bolt from passing through the mounting hole.
- All systems, regardless of hardware configurations, should be mounted at or below a 45-degree angle from the mower.



If you should have any questions regarding the use of a particular mounting method, please do not hesitate to contact us at 800.411.0150 or by email at sales@bigleaguelawns.com.

Thank you,

Big League Lawns, LLC

When Mowing Isn't Enough... Let it Roll!





US Patent 6,962,039 B2

US Patent 6,993,894 B2

FEIN 38-3198349



2018 and Later Models

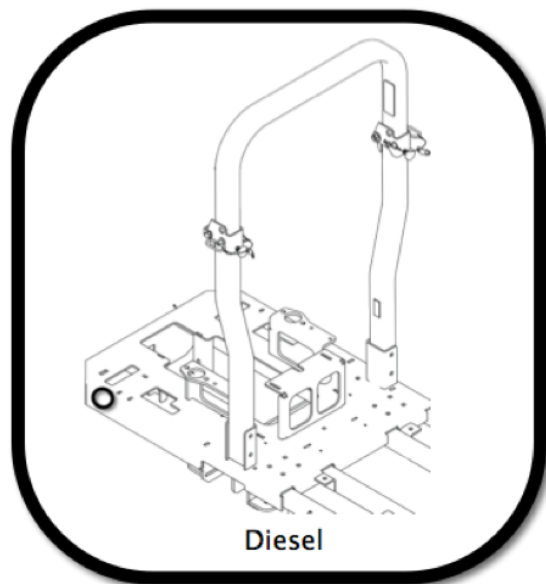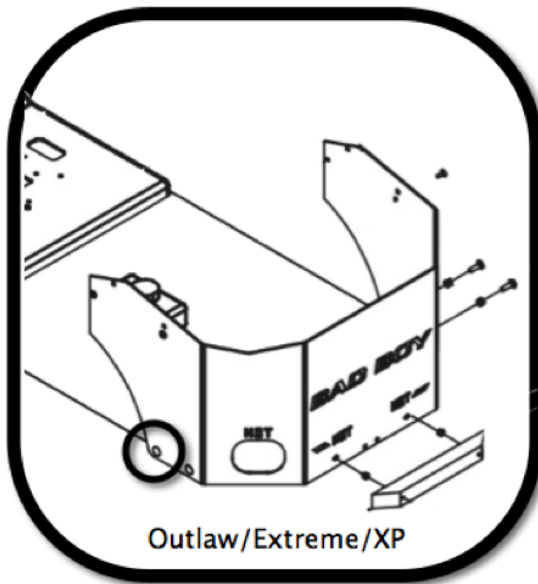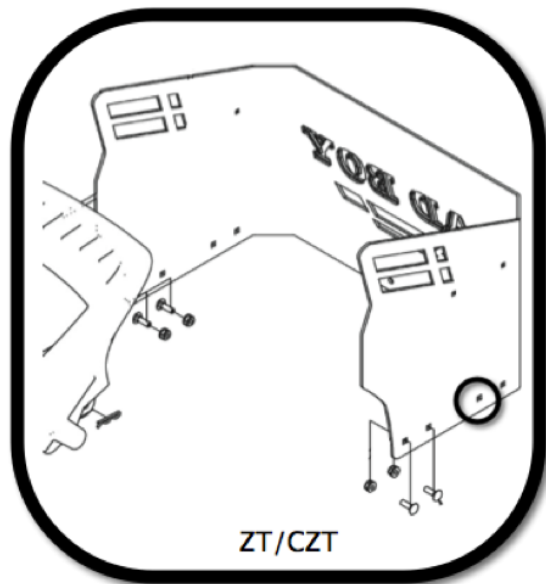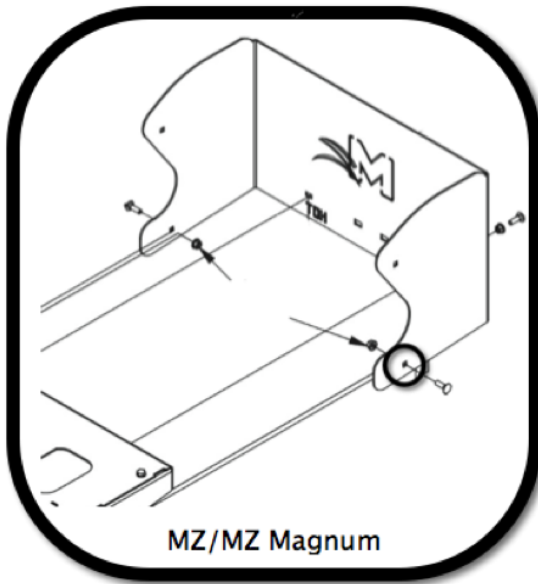



CheckMate™ Lawn Striping Kits; Mounting Location


2019 Models





Mounting Option D

Important: Only the 3/8" threaded portion of your pivot bolt threads pass through the mower frame. If you are mounting to an oversize hole, please place a 3/8" flat washer on the pivot bolt threads to prevent the smooth portion of this bolt from passing through your frame.

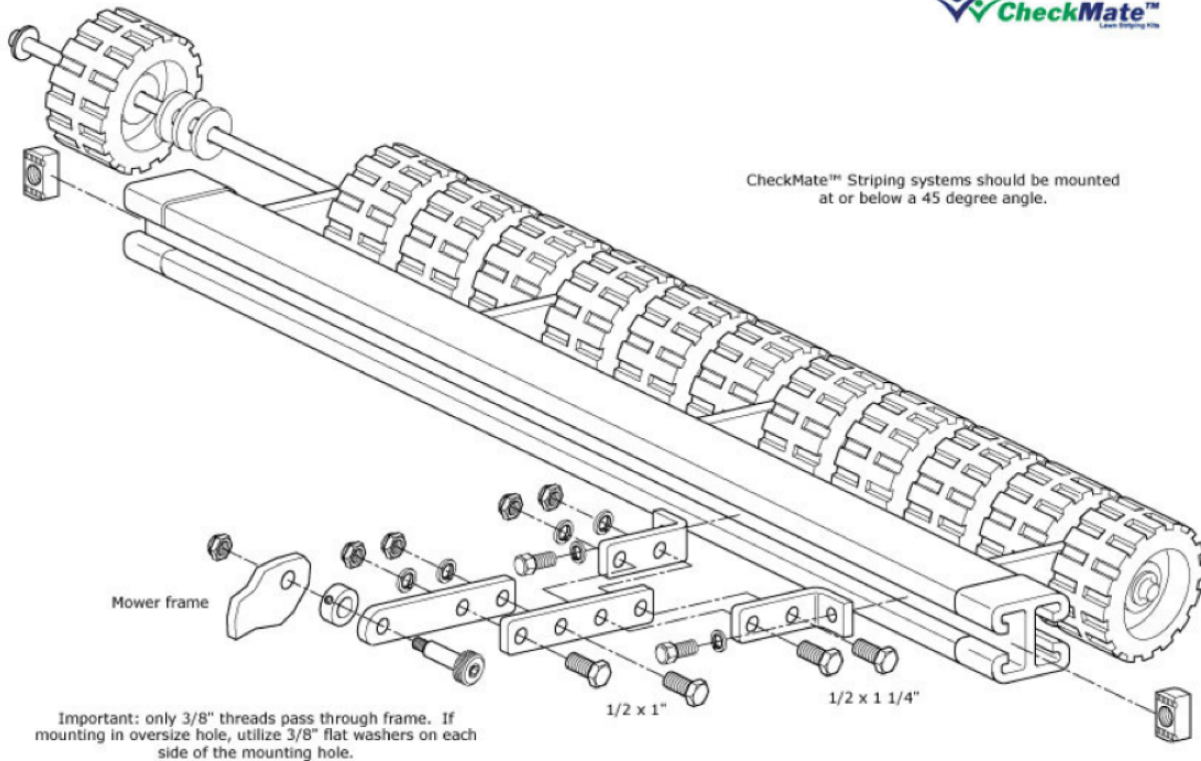

(1) Acquire Hole



(2) Install bolt



(3) Add lock washer



(4) Tighten coupler nut



(5) Thread pivot bolt



(6) Tighten pivot bolt



Attach Mounting Arms to Cross Channel



Photo demonstrates how the CheckMate™ mounting arm should freely swivel once attached to the coupler



Remove 1/2" x 1" bolts pre-installed in cross channel. Insert bolts through bottom L brackets of mounting arms and into channel locking nuts.



Center the roller behind the mower and tighten the mounting arms to the cross channel using a 3/4" wrench. Please apply approximately 90 lbs. of torque to secure the arms in place.