




CheckMate™ Lawn and Athletic Field Striping Kits

1125 Mak-Tech Dr. Suite C.

◆ Lansing, MI 48906 ◆

800.411.0150

www.bigleaguelawns.com

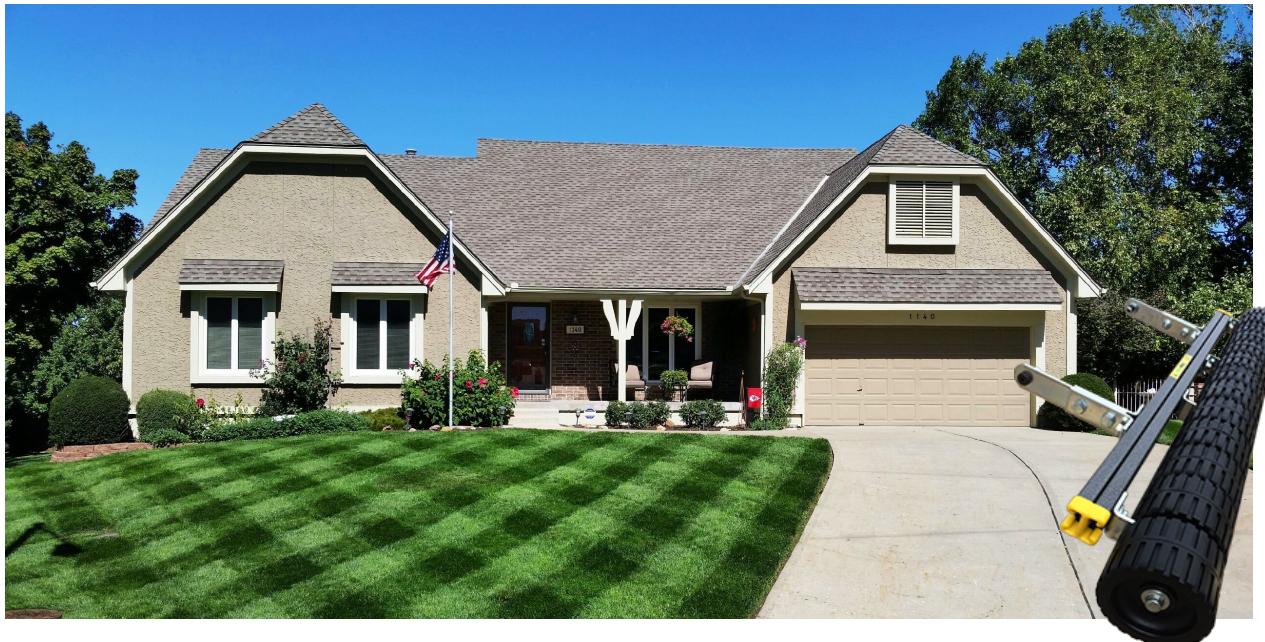

CheckMate™ Lawn Striping Kit For Gravely XD3 Push Mower Installation Guide

Important

Big League Lawns, LLC warrants their products to be free of defects in material and workmanship. This warranty does not cover defects due directly or indirectly to misuse, abuse, normal wear and tear, failure to properly maintain the product or used for a purpose other than that for which it is intended. The duration of this warranty is expressly limited to one year parts and labor beginning from the date of delivery to the original customer.

The obligation of Big League Lawns, LLC is limited solely to the repair or replacement, at our option, at its factory or authorized repair agent of any part that should prove deficient. Purchaser must maintain the product under normal operating conditions at all times. Prior to operation, become familiar with the attachment and any disconnect features. This product is not intended to be used in a transport position or to be backed over curbs. When not in use, the product should be removed from the mower and transported in a safe manner. Failure to follow these instructions will void the warranty.



US Patent 6,962,039 B2, US Patent 6,993,894 B2

Mounting Instructions Gravely XD3 Push Mower

Congratulations on your new purchase! You are just steps away from creating a beautifully patterned lawn using your new CheckMate™ lawn striping roller. To ensure a long life of both your mower and roller, please be sure to follow the mounting recommendations below.

Tools Required:

9/16" Wrench
3/4" Wrench



7/32" Allen Wrench




Step 1: Remove Existing Rear Dust Flap



Step 2: Assemble Mounting Arms

Using the schematic and example photo below, assemble your mounting arms to connect to the support axle.

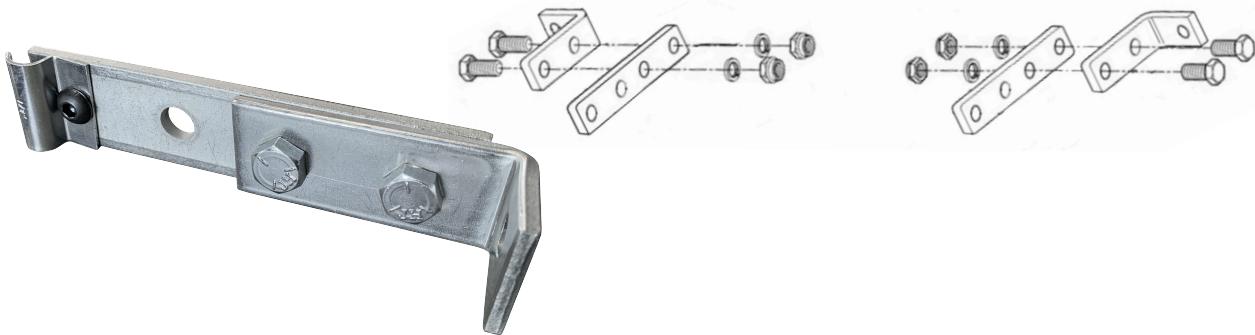

Mounting arms will clamp down on to the former dust flap support "axel"



Step 3: Install Clamps to Support Axel

Once the Clamp is open, place the open end of the clamp around the top side of the support axel (pictured below). Secure 3/8" locknut to the button head bolt using the 7/32" Allen key and a 9/16" wrench.



Step 4: Install Mounting Arms

Remove preinstalled 1/2" x 1" bolts and lock washers from gray channel (circled in green). Re-insert the bolt [with split lock washer] through the L shaped bracket and thread into the channel nut inside channel. **(Before tightening bolts all the way down; center roller behind the mower)**

After centering the roller; use a 3/4" wrench to firmly tighten each mounting arm to the striping roller.



Final Steps

Review installation, pick up the roller to confirm it freely pivots up and down.



Installation is now complete! Enjoy lawn striping with your new CheckMate™ Striping kit!