



CheckMate™ Lawn and Athletic Field Striping Kits

1125 Mak-Tech Dr, Suite C.



Lansing, MI 48906



800.411.0150

www.bigleaguelawns.com



CheckMate™ Lawn Striping Kit For Cub Cadet Ultima Installation Guide

Important

Big League Lawns, LLC warrants their products to be free of defects in material and workmanship. This warranty does not cover defects due directly or indirectly to misuse, abuse, normal wear and tear, failure to properly maintain the product or used for a purpose other than that for which it is intended. The duration of this warranty is expressly limited to one year parts and labor beginning from the date of delivery to the original customer.

The obligation of Big League Lawns, LLC is limited solely to the repair or replacement, at our option, at its factory or authorized repair agent of any part that should prove deficient. Purchaser must maintain the product under normal operating conditions at all times. Prior to operation, become familiar with the attachment and any disconnect features. This product is not intended to be used in a transport position or to be backed over curbs. When not in use, the product should be removed from the mower and transported in a safe manner. Failure to follow these instructions will void the warranty.







US Patent 6,962,039 B2, US Patent 6,993,894 B2

Mounting Instructions Cub Cadet Ultima Mowers

Congratulations on your new purchase! You are just steps away from creating a beautifully patterned lawn using your new CheckMate™ lawn striping roller. To ensure a long life of both your mower and roller, please be sure to follow the mounting recommendations below.

Tools Required:

9/16" Wrench	1/2" Wrench	3/4" Wrench	Crescent Wrench	Tape
				


Step 1: Prepare Frame for Installation

Using tape (electric/duct recommended), apply the tape at the noted location below to prevent the clamp from scratching the machine.




Step 2: Assemble Brackets on Mower

Place the provided 2" x 3" U bolt on the tape from step 1 with the open end facing the ground. Next, place the Quick release bracket onto the ends of the U bolt with the bend of the bracket on the outside of the machine. After the bracket, place the backing plate on the U bolt and secure with the supplied 5/16" locknuts. *Equal threads should be showing on each side of the U bolt after tightening. *Note that both stabilizer pins must be pointing in the same direction for the quick release system to function properly.

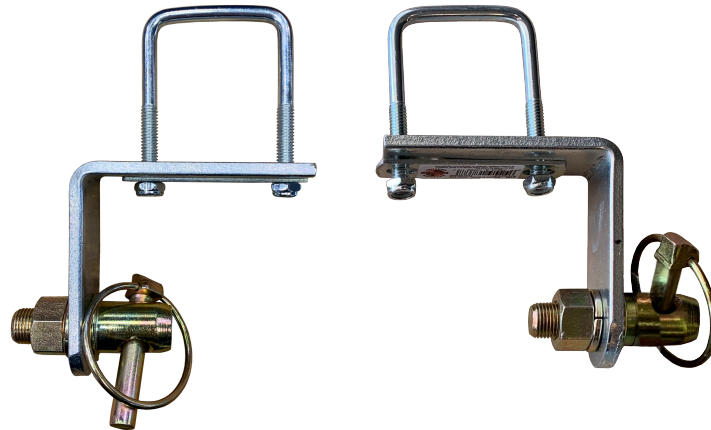

Step 3: Assemble Mounting Arms

Use the schematic below to assemble your mounting arms that will attach to the stabilizer pins on the quick release brackets. When attaching the arms to the Striping Kit, finger tighten the bolts first so that you can position the arms with the quick release brackets and center the Striping Kit behind the mower.

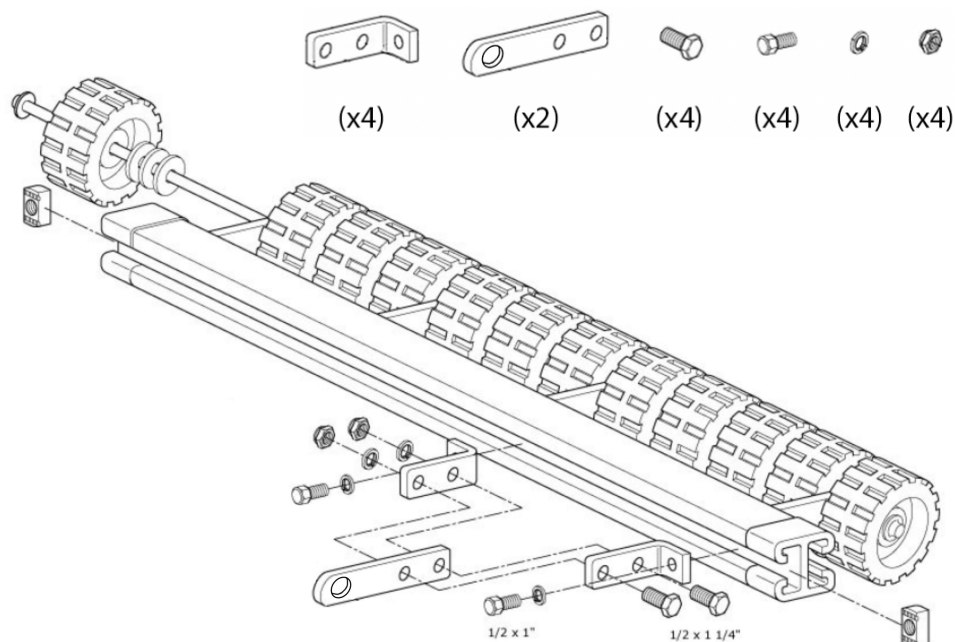

Step 4: Installing Striping Kit to Quick Release Brackets

Using the newly assembled mounting arms that are loosely attached to the Striping Kit, You can line them up with the stabilizer pins on the quick release brackets. Once you have your striping kit centered behind the machine, you can tighten the mounting arms to the grey channel using a 3/4" wrench.



Step 5: Enjoy Striping With Your New CheckMate™ Striping Kit

Once tightened and everything is set, you are ready to start creating vibrant stripes and patterns that will have everyone talking!

