



## CheckMate™ Lawn and Athletic Field Striping Kits

1125 Mak-Tech Dr. Suite C

◆ Lansing, MI 48906

◆ 800.411.0150

[www.bigleaguelawns.com](http://www.bigleaguelawns.com)



### CheckMate™ Gravely Pro-turn 500-600 Series Lawn Striping Kit Installation Guide

#### Important

Big League Lawns, LLC warrants their products to be free of defects in material and workmanship. This warranty does not cover defects due directly or indirectly to misuse, abuse, normal wear and tear, failure to properly maintain the product or used for a purpose other than that for which it is intended. The duration of this warranty is expressly limited to one year parts and labor beginning from the date of delivery to the original customer.

The obligation of Big League Lawns, LLC is limited solely to the repair or replacement, at our option, at its factory or authorized repair agent of any part that should prove deficient. Purchaser must maintain the product under normal operating conditions at all times. Prior to operation, become familiar with the attachment and any disconnect features. This product is not intended to be used in a transport position or to be backed over curbs. When not in use, the product should be removed from the mower and transported in a safe manner. Failure to follow these instructions will void the warranty.

Congratulations on your new purchase! You are just steps away from creating a beautifully patterned lawn using your new CheckMate™ lawn striping roller. To ensure a long life of both your mower and roller, please be sure to follow the mounting recommendations in this packet.



If you should have any questions regarding the use of a particular mounting method, please do not hesitate to contact us at 800.411.0150 or via email at [sales@bigleaguelawns.com](mailto:sales@bigleaguelawns.com).

Important: If you purchased your striping kit through a 3<sup>rd</sup> party vendor and have any questions regarding your mounting options, please do not hesitate to contact us. We have a great wealth of knowledge, tips and tricks, which may be helpful. Unfortunately, when we receive purchase orders via 3<sup>rd</sup> party vendors we do not know in advance what mower the roller is being attached to.

Thank you,

Big League Lawns, LLC

**When Mowing Isn't Enough... Let it Roll!**

**US Patent 6,962,039 B2**

**US Patent 6,993,894 B2**

**FEIN 38-3198349**

## Mounting Option B and D

You will want to follow the schematics below to assemble your mounting arms.

**Mounting Option B is usually the preferred option for the Gravely Pro Turn 500-600 Series, however if you need more clearance for your striping kit please use Option D as it incorporates extension arms.**

**Tools Required:** For this installation you will need the following tools.



CheckMate™ Hardware



Drill




3/8" Drill Bit




1/8" wrench or socket  
and 3/4" wrench or  
socket

### Option B

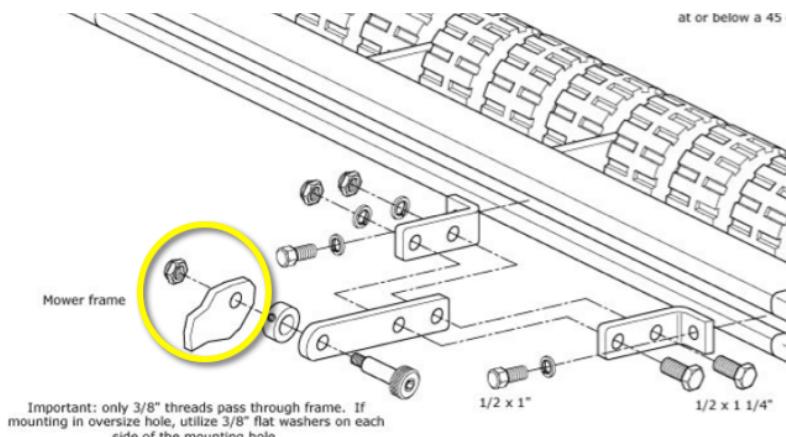

Important: only 3/8" threads pass through frame. If mounting in oversize hole, utilize 3/8" flat washers on each side of the mounting hole.

### Option D

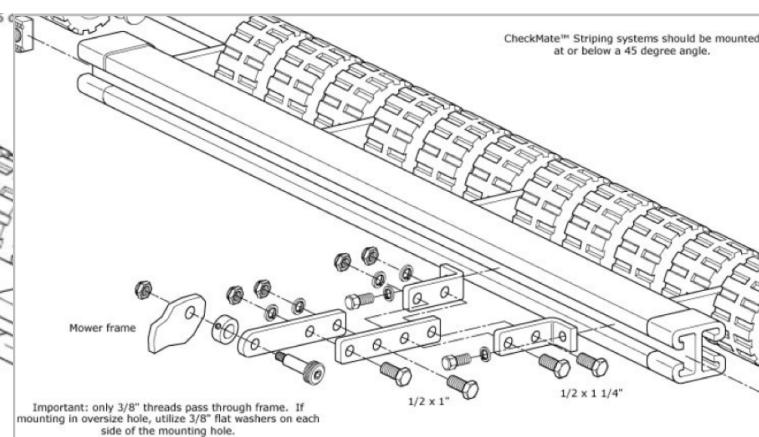




Your Gravely Pro Turn requires two 3/8" Holes to be drilled in each tie down loop. [See photos below for reference, yellow circles]


Line up your Quick Release L-Brackets that have stabilizer pins pre installed and mark your hole locations, then drill using a 3/8" drill bit.

It's important that these holes are drilled as symmetrically as possible to insure easy on and off quick release functionality. Stabilizer pins must be installed facing the same direction in order to allow the stinger to slide on and off of the pins.

## Drilled Holes Example:

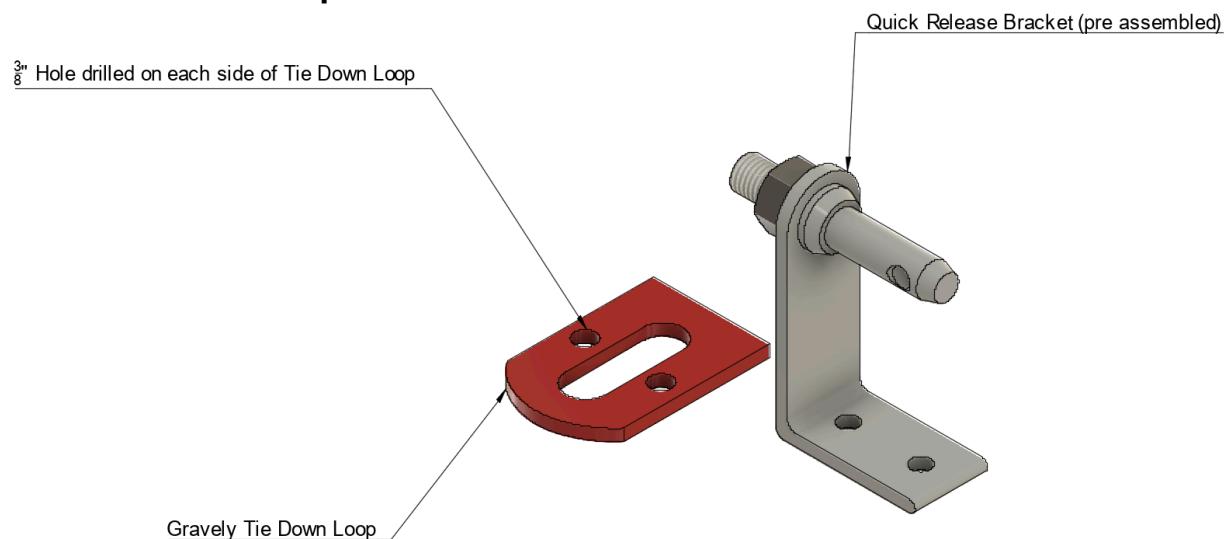

## Assembly/ Quick Release Installation:

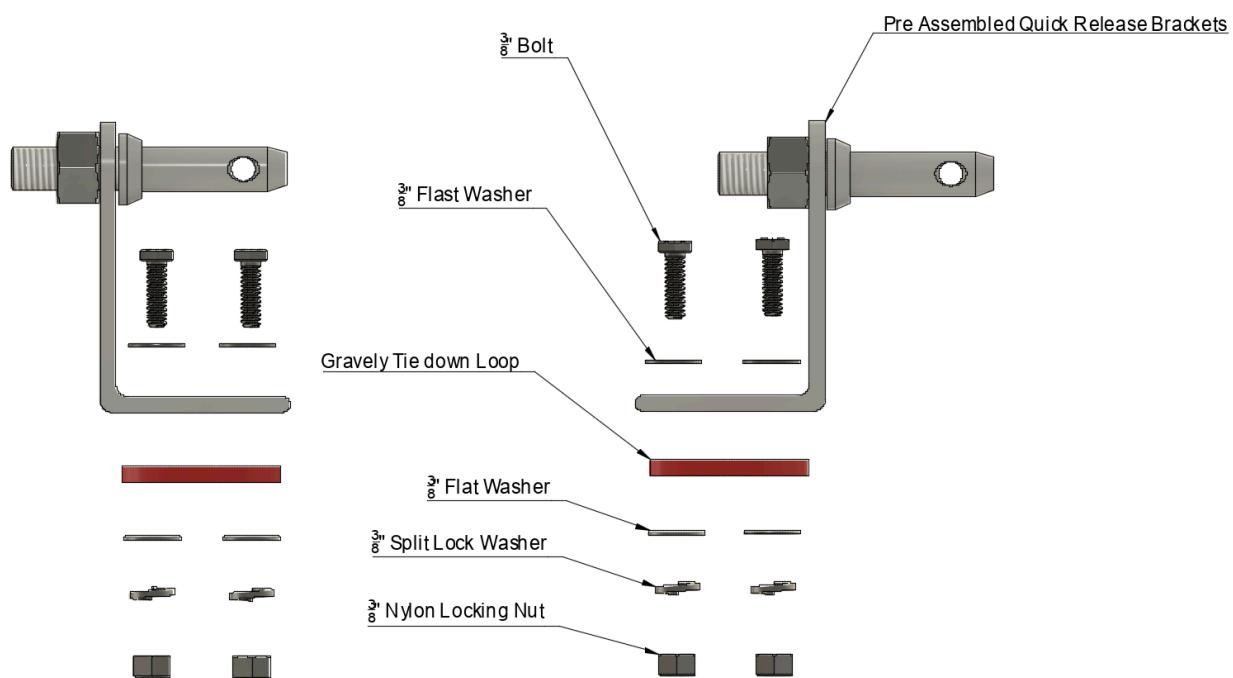

## Installed Stabilizer Pin Orientation Example:

