



CheckMate™ Lawn and Athletic Field Striping Kits

1125 Mak Tech Dr. Suite C

◆ Lansing, MI 48906

◆ 800.411.0150

www.bigleaguelawns.com

CheckMate™ Spartan Zero Turn Lawn Striping Kit Installation Guide



Important

Big League Lawns, LLC warrants their products to be free of defects in material and workmanship. This warranty does not cover defects due directly or indirectly to misuse, abuse, normal wear and tear, failure to properly maintain the product or used for a purpose other than that for which it is intended. The duration of this warranty is expressly limited to one year parts and labor beginning from the date of delivery to the original customer.


The obligation of Big League Lawns, LLC is limited solely to the repair or replacement, at our option, at its factory or authorized repair agent of any part that should prove deficient. Purchaser must maintain the product under normal operating conditions at all times. Prior to operation, become familiar with the attachment and any disconnect features. This product is not intended to be used in a transport position or to be backed over curbs. When not in use, the product should be removed from the mower and transported in a safe manner. Failure to follow these instructions will void the warranty.



US Patent 6,962,039 B2, US Patent 6,993,894 B2

Congratulations on your new purchase! You are just steps away from creating a beautifully patterned lawn using your new CheckMate™ lawn striping roller. To ensure a long life of both your mower and roller, please be sure to follow the mounting recommendations below.

Please note the following prior to installing your new CheckMate™ Striping System:

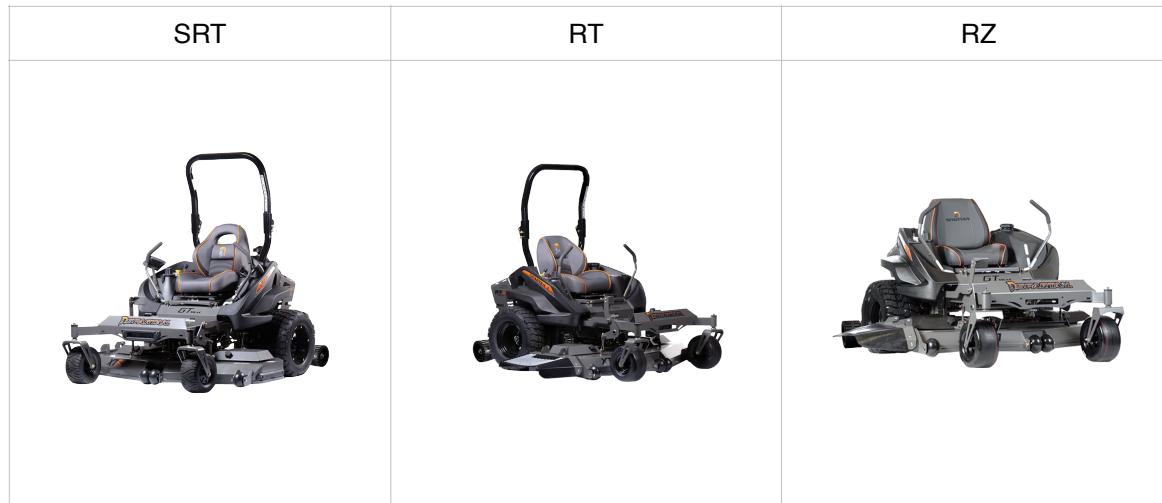

- All systems, regardless of hardware configurations, should be mounted at or below a 45 degree angle from the mower.

If you should have any questions regarding the use of a particular mounting method, please do not hesitate to contact us at 800.411.0150 or via email at sales@bigleaguelawns.com.

Important: If you purchased your striping kit through a 3rd party vendor and have any questions regarding your mounting options, please do not hesitate to contact us. We have a great wealth of knowledge, tips and tricks, which may be helpful. Unfortunately, when we receive purchase orders via 3rd party vendors we do not know in advance what mower the roller is being attached to.

Thank you,

Big League Lawns, LLC

When Mowing Isn't Enough... Let it Roll!

US Patent 6,962,039 B2

US Patent 6,993,894 B2


FEIN 38-3198349



US Patent 6,962,039 B2, US Patent 6,993,894 B2

Hardware Configuration:	Most Commonly Used:	Supporting Photos:
Mounting Option E	Commercial ZTR's with tubular framing.	

Mounting Option E

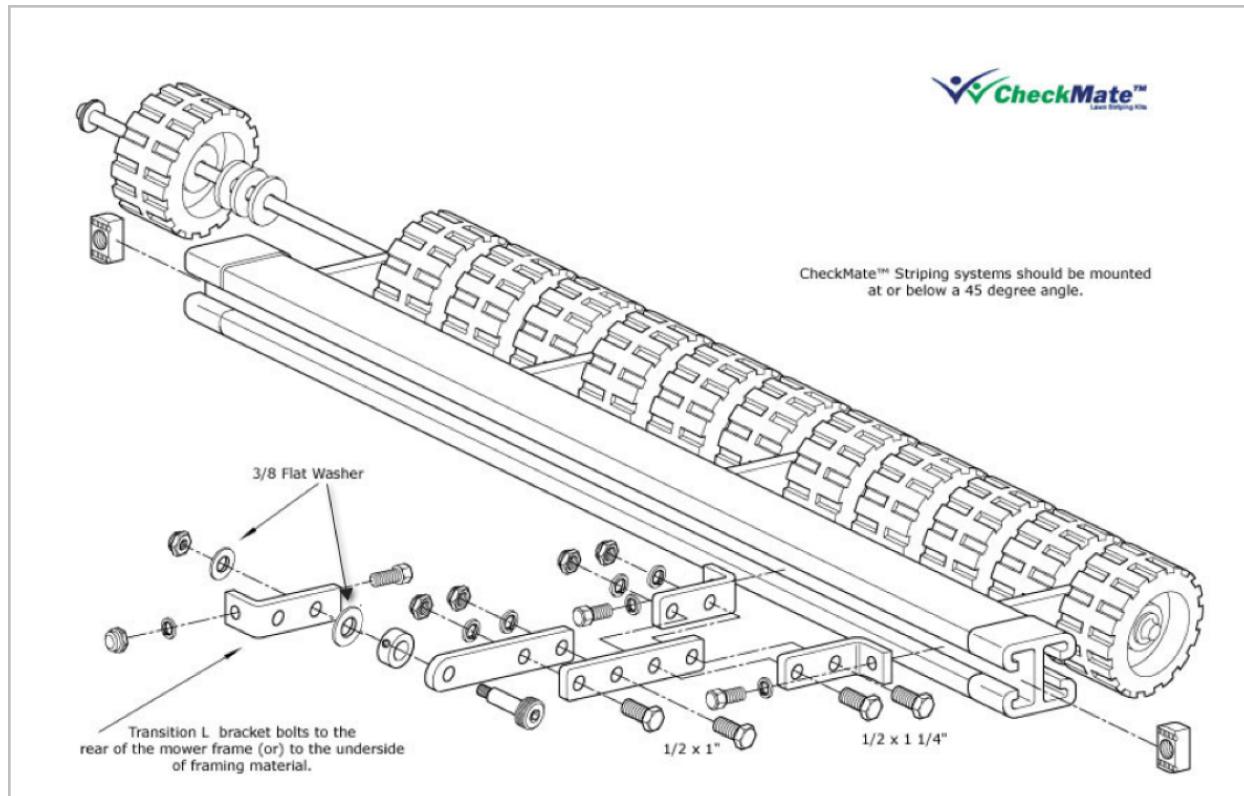



US Patent 6,962,039 B2, US Patent 6,993,894 B2

When mounting your quick release brackets to your frame, you will need to unbolt your engine guard bolts (Labeled with the red arrows in the schematic below).

You will then place your quick release brackets where the bolt holes are, below your tubular framing. You will then replace the bolts you removed and tighten everything down. **Note: The gold stabilizer pins of your quick release brackets must be facing the same direction to allow the striper to slide on and off of the pins.**

Once your striping kit support arms are assembled by following the Mounting Option E schematic, line them up on top of your striper's channel to match up with your quick release brackets. Tighten everything down; once done you will be ready to slide your striper on and off of the quick release brackets.

