



CheckMate™ Lawn and Athletic Field Striping Kits

1125 Mak-Tech Dr. Suite C

◆ Lansing, MI 48906 ◆

800.411.0150

www.bigleaguelawns.com



CheckMate™ Gravely ZT-HD Lawn Striping Kit Clamp Bracket Installation Guide

Important

Big League Lawns, LLC warrants their products to be free of defects in material and workmanship. This warranty does not cover defects due directly or indirectly to misuse, abuse, normal wear and tear, failure to properly maintain the product or used for a purpose other than that for which it is intended. The duration of this warranty is expressly limited to one year parts and labor beginning from the date of delivery to the original customer.

The obligation of Big League Lawns, LLC is limited solely to the repair or replacement, at our option, at its factory or authorized repair agent of any part that should prove deficient. Purchaser must maintain the product under normal operating conditions at all times. Prior to operation, become familiar with the attachment and any disconnect features. This product is not intended to be used in a transport position or to be backed over curbs. When not in use, the product should be removed from the mower and transported in a safe manner. Failure to follow these instructions will void the warranty.



US Patent 6,962,039 B2, US Patent 6,993,894 B2

Mounting Instructions CheckMate™ Clamp Bracket


Congratulations on your new purchase! You are just steps away from creating a beautifully patterned lawn using your new CheckMate™ lawn striping roller. To ensure a long life of both your mower and roller, please be sure to follow the mounting recommendations below.

Tools Required:

9/16" Wrench 	1/4" Allen Wrench 
---	--

Step 1: Set Up Brackets


Remove brackets from packaging and confirm that you have all necessary hardware that is included exactly as pictured below.

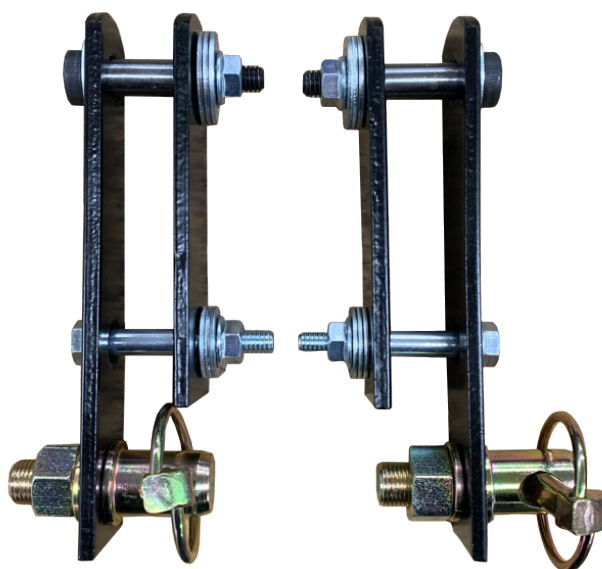



US Patent 6,962,039 B2, US Patent 6,993,894 B2

Quick Clamp will mount as shown, please refer to the rest of this instruction booklet for Quick Clamp assembly.

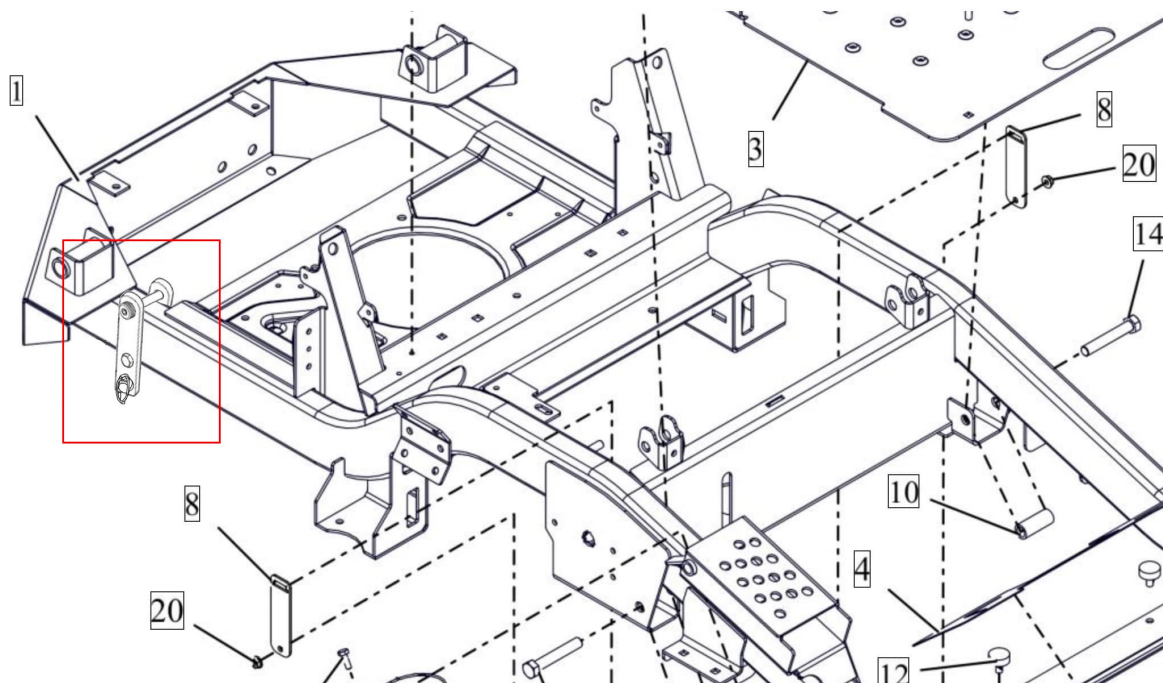



US Patent 6,962,039 B2, US Patent 6,993,894 B2

Parts List

Photo	Part Description	Quantity
	3-Hole Mounting Bracket	2
	2-Hole Mounting Bracket	2
	3/8" x 2-1/2" Bolt	4
	3/8" Flat Washer	8
	7/16" Flat Washer	8
	3/8" Spin Locknut	4



US Patent 6,962,039 B2, US Patent 6,993,894 B2




Step 2: Assemble Brackets on Mower

Place the provided 1/2" x 1-3/4" shoulder bolt and 3/8" x 2-1/2" bolt through the 3-hole bracket on the outside of the frame. Next, place the 2-hole bracket on the inside of the frame and align with the bolts. Utilize stack of 3 washers on each bolt and secure to the bracket with the 3/8" spin lock nut. Tighten each bolt to firmly attach bracket to the frame. *Note that both stabilizer pins must be pointing in the same direction for the quick release system to function properly.

Left Side (From Rear)



Right Side (From Rear)

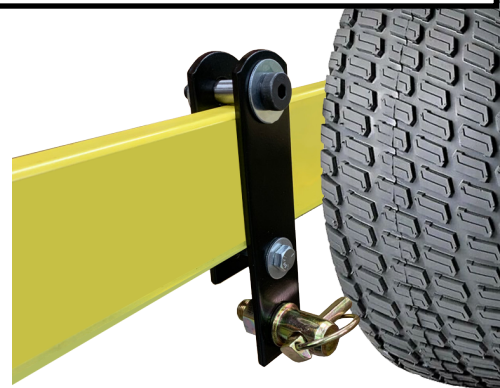


Step 3: Assemble Mounting Arms

Use the schematic on the next page to assemble your mounting arms that will attach to the stabilizer pins on the quick release brackets. When attaching the arms to the Striping Kit, finger tighten the bolts first so that you can position the arms on the quick release brackets and center the Striping Kit behind the mower.



US Patent 6,962,039 B2, US Patent 6,993,894 B2

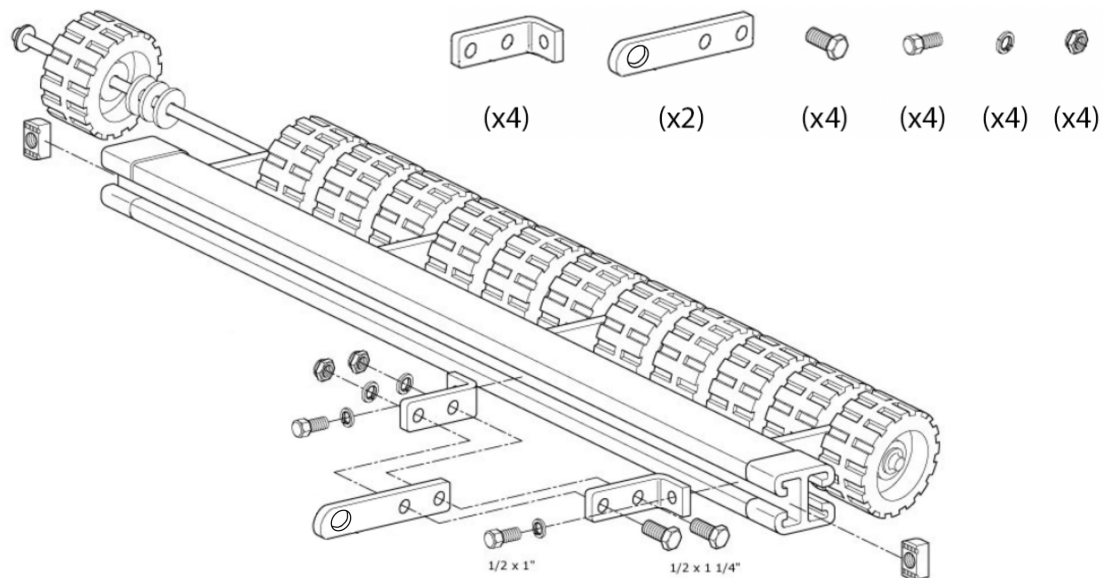

Step 4: Installing Striping Kit to Quick Release Brackets

Using the newly assembled mounting arms that are loosely attached to the Striping Kit, align with the stabilizer pins on the quick release brackets. Once you have your striping kit centered behind the machine, tighten the mounting arms to the grey channel using a 3/4" wrench.

Step 5: Enjoy Striping With Your New CheckMate™ Striping Kit

Once tightened and everything is set, you are ready to start creating vibrant stripes and patterns that will have everyone talking!



Installation is now complete! Enjoy your striping with your new CheckMate™ Striping kit!