



## Mounting Instructions Stihl Zero Turn



### Important

Big League Lawns, LLC warrants their products to be free of defects in material and workmanship. This warranty does not cover defects due directly or indirectly to misuse, abuse, normal wear and tear, failure to properly maintain the product or used for a purpose other than that for which it is intended. The duration of this warranty is expressly limited to one year parts and labor beginning from the date of delivery to the original customer.

The obligation of Big League Lawns, LLC is limited solely to the repair or replacement, at our option, at its factory or authorized repair agent of any part that should prove deficient. Purchaser must maintain the product under normal operating conditions at all times. Prior to operation, become familiar with the attachment and any disconnect features. This product is not intended to be used in a transport position or to be backed over curbs. When not in use, the product should be removed from the mower and transported in a safe manner. Failure to follow these instructions will void the warranty.

**Tools Required:** For this installation you will need the following tools.

---



CheckMate™ Hardware



1/8" wrench or socket  
and 3/4" wrench or socket

### **Step 1: Locate the Mounting Location**

---

Attach the Quick Release plates to the underside framing at the back of the machine. You will have existing holes that will line up with the plates. The holes are used for the mower's rear bumper, you'll utilize the bumper's bolts to attach the quick release plates to the inside of your frame.





## Step 2: Mount Plates

Use the hardware included with the Quick Release plates, or OEM bolts (if applicable) to attach them to the frame with existing holes. Note that when you attach the Quick Release plates, the stabilizer pins must be facing in the same direction so that the CheckMate™ striping kit will be able to properly slide on and off in the same direction. (See Example)




E.G. Both pins facing to the left in this example.

---


## Step 3: Assemble Hardware

Please refer to the schematic below in order to assemble the mounting arms. If you need extra clearance, use Option B below. \*Note: Only finger tighten the bolts that secure the arms to the supporting channel piece for now, so that you can center the roller behind the machine before securing the arms to the channel.

### Option A:

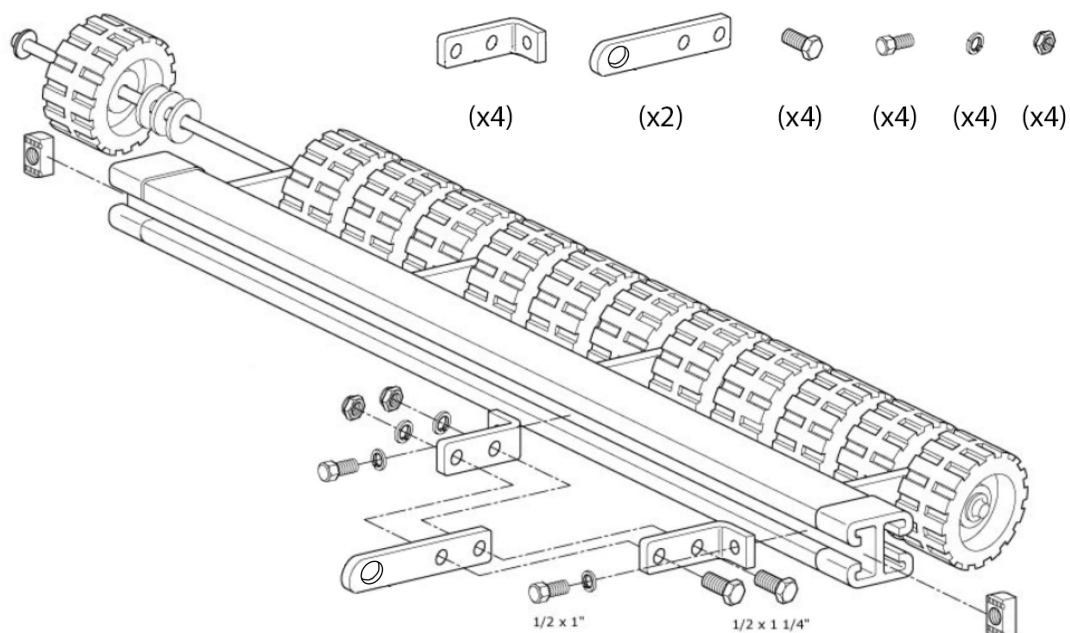

### **Option B:**

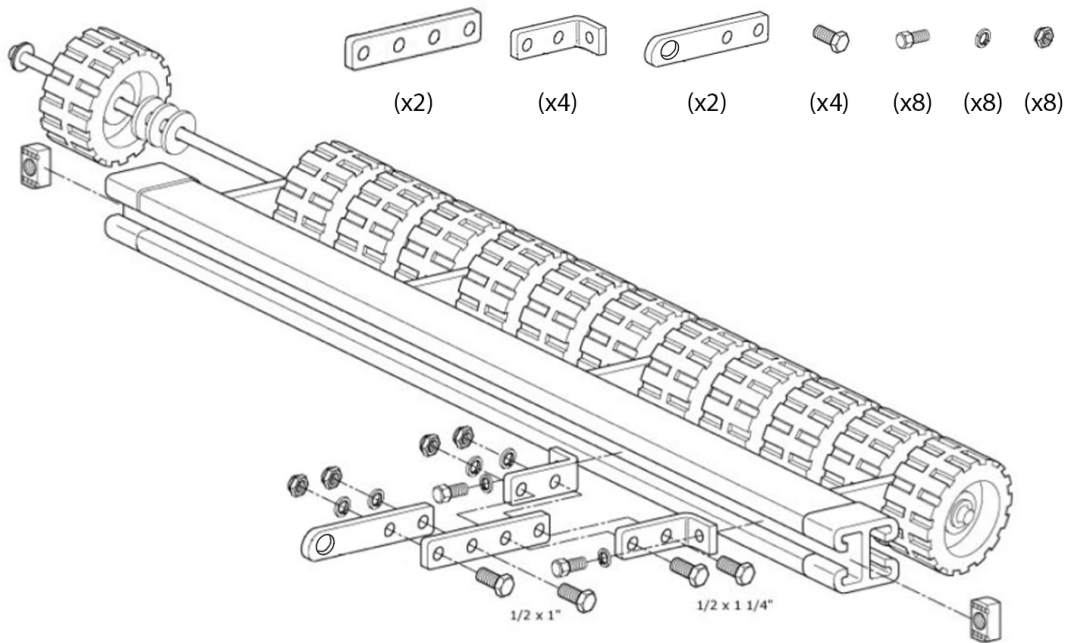

### **Step 4: Center the CheckMate™ behind the machine.**

Once you have the mounting arms assembled and placed on the roller, adjust the roller side to side until it is centered behind the mower. Once you have centered the CheckMate™ striping kit, you can proceed to tighten the mounting arms to the grey channel piece.





**Installation Example Photos:**

Photos show mounting arms built using Option B. We suggest using Option A, to assemble mounting arms.

