



1125 Mac Tek Dr C



Lansing, MI 48906



800.411.0150

www.bigleaguelawns.com



CheckMate™ Quick Release Lawn Striping Kit For EGO 22" Push Mower

Important

Big League Lawns, LLC warrants their products to be free of defects in material and workmanship. This warranty does not cover defects due directly or indirectly to misuse, abuse, normal wear and tear, failure to properly maintain the product or used for a purpose other than that for which it is intended. The duration of this warranty is expressly limited to one year parts and labor beginning from the date of delivery to the original customer.

The obligation of Big League Lawns, LLC is limited solely to the repair or replacement, at our option, at its factory or authorized repair agent of any part that should prove deficient. Purchaser must maintain the product under normal operating conditions at all times. Prior to operation, become familiar with the attachment and any disconnect features. This product is not intended to be used in a transport position or to be backed over curbs. When not in use, the product should be removed from the mower and transported in a safe manner. Failure to follow these instructions will void the warranty.



US Patent 6,962,039 B2, US Patent 6,993,894 B2

Mounting Instructions EGO Push Mowers

Congratulations on your new purchase! You are just steps away from creating a beautifully patterned lawn using your new CheckMate™ lawn striping roller. To ensure a long life of both your mower and roller, please be sure to follow the mounting recommendations below.

Tools Required:

13mm Wrench or Socket	9/16" Wrench or Socket	3/4" Wrench or Socket	Provided Allen Keys
			

Step 1: Identify the two bolts circled in green, you will use them to install our mounting bracket.



Step 2: Using a 13mm Wrench or Socket, remove the bolts circled in Green in Step 1.



Step 3: Using the provided M8 Bolts. Bolt our mounting plate to each side of your mower's frame. **The fork side of the plate needs to point towards the front of your mower on each side.**

Place two of the provided flat washers between the mounting plate and your mower's frame on each mounting bolt. Tighten until snug. (do NOT over tighten) When done, it should look like the next page.






US Patent 6,962,039 B2, US Patent 6,993,894 B2



Step 4: Install the quick release mechanism on to our provided mounting brackets

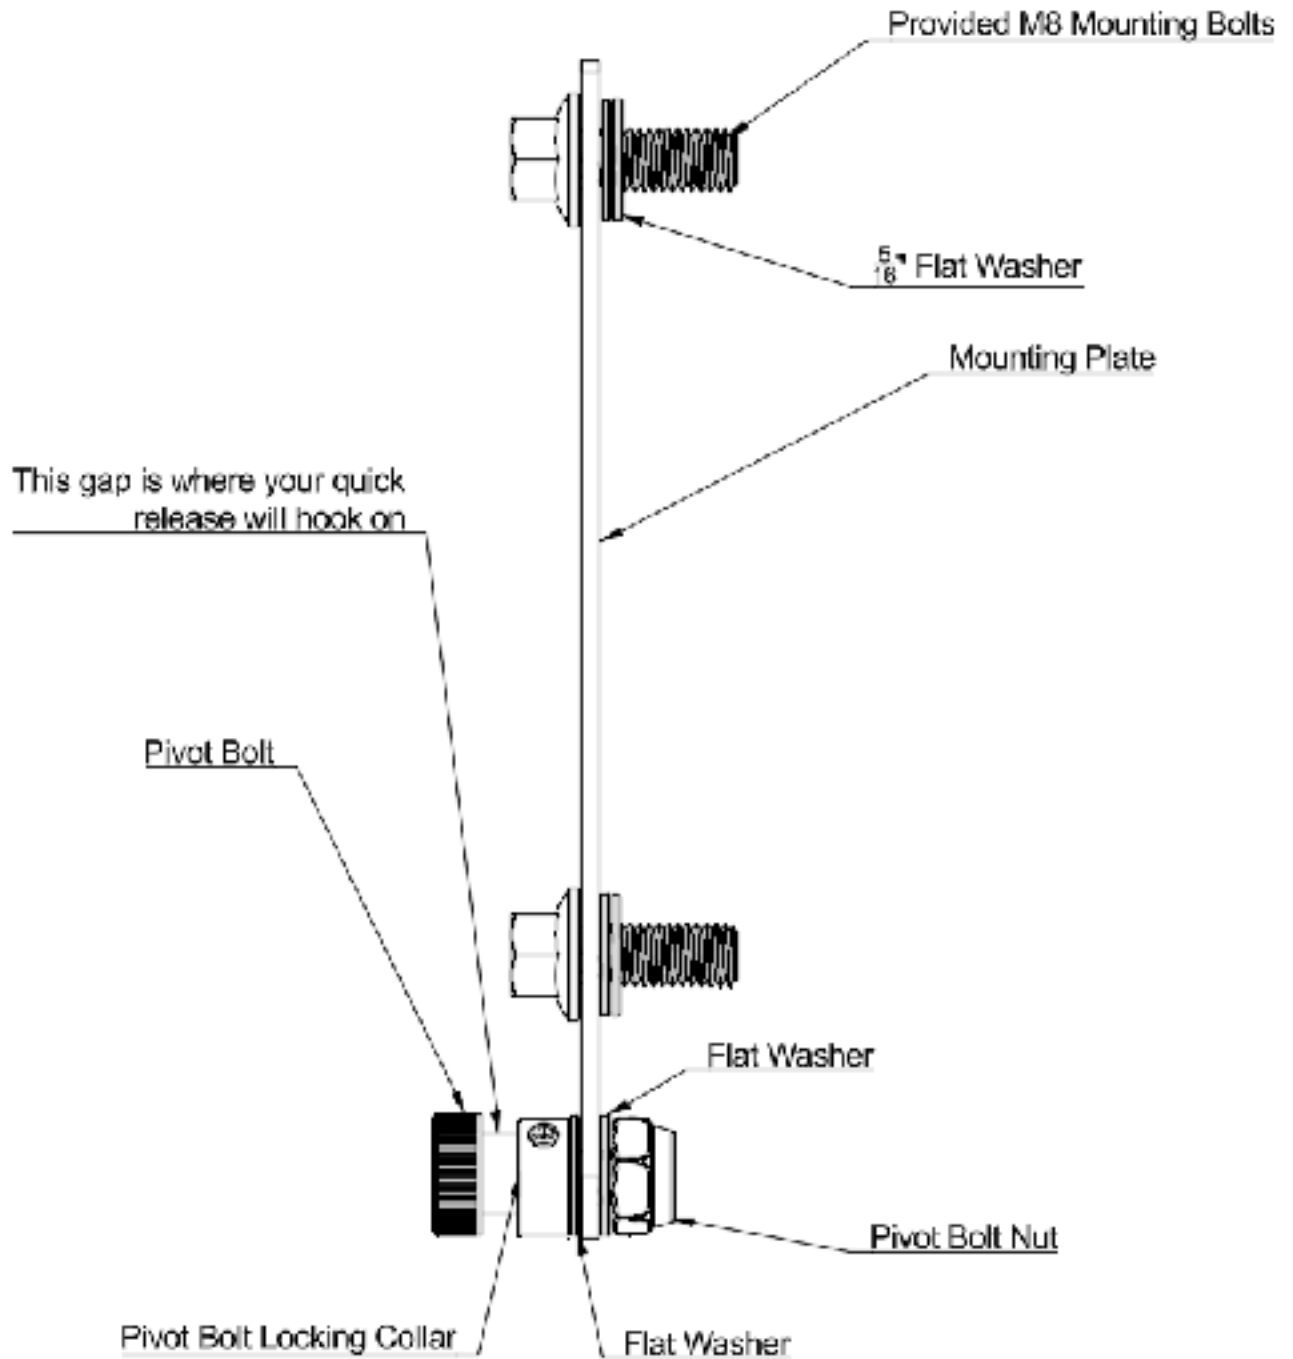


When done, it will look like the next page.

This is what your quick release mechanism should look like when you're done.



Step 5: Assemble Mounting Arms using the below schematic.

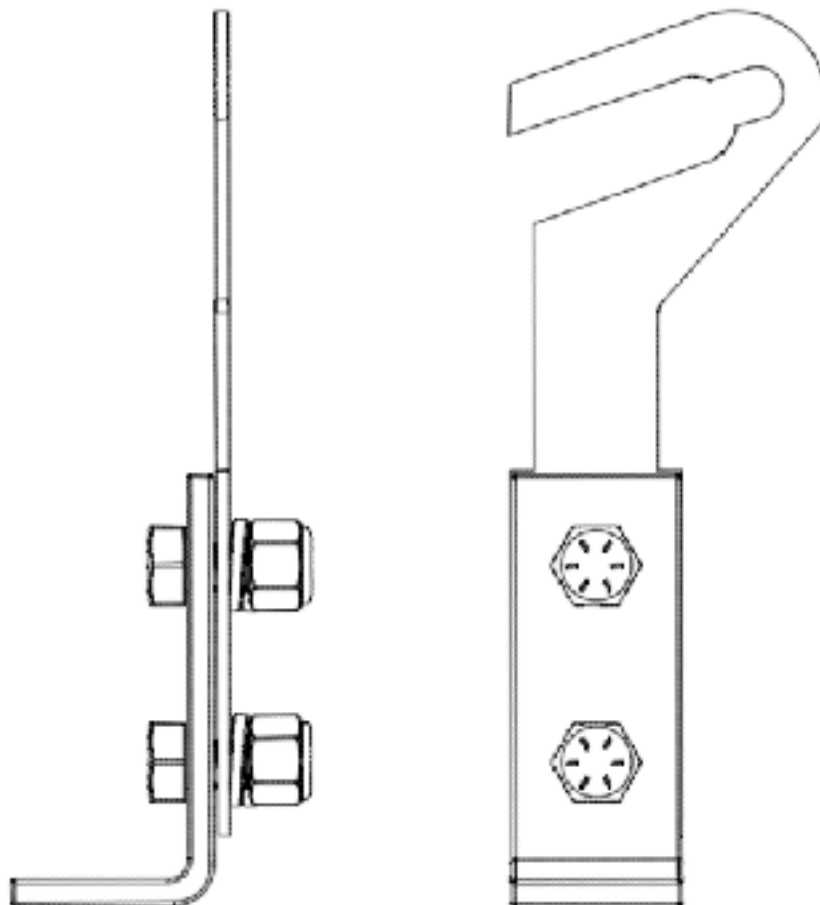

Step 5: Hook your mounting arms on to the pivot point / bolt



Step 6: While hooked to the pivot point, bolt your mounting arms to your striper.





US Patent 6,962,039 B2, US Patent 6,993,894 B2



Final Steps

Check installation, pick up the roller to confirm it freely pivots up and down. Also reinstall bagger to mower if desired.

Installation is now complete! Enjoy striping with your new CheckMate™ Stripping kit!

If you have any questions or concerns, feel free to reach out to us!

Phone: (800) 411-0150

Email: sales@bigleaguelawns.com