



CheckMate™ Lawn and Athletic Field Striping Kits

1125 Mac Tek Dr C



Lansing, MI 48906



800.411.0150

www.bigleaguelawns.com



CheckMate™ Lawn Striping Kit For Aluminum EGO 22" / Ryobi 21" Push Mower

Important

Big League Lawns, LLC warrants their products to be free of defects in material and workmanship. This warranty does not cover defects due directly or indirectly to misuse, abuse, normal wear and tear, failure to properly maintain the product or used for a purpose other than that for which it is intended. The duration of this warranty is expressly limited to one year parts and labor beginning from the date of delivery to the original customer.

The obligation of Big League Lawns, LLC is limited solely to the repair or replacement, at our option, at its factory or authorized repair agent of any part that should prove deficient. Purchaser must maintain the product under normal operating conditions at all times. Prior to operation, become familiar with the attachment and any disconnect features. This product is not intended to be used in a transport position or to be backed over curbs. When not in use, the product should be removed from the mower and transported in a safe manner. Failure to follow these instructions will void the warranty.





Mounting Instructions EGO 22" & Ryobi 21" Push Mowers

Congratulations on your new purchase! You are just steps away from creating a beautifully patterned lawn using your new CheckMate™ lawn striping roller. To ensure a long life of both your mower and roller, please be sure to follow the mounting recommendations below.

Tools Required:

For Ego	13mm Wrench or Socket	9/16" Wrench or Socket	3/4" Wrench or Socket	Provided Allen Keys
For Ryobi	Provided 25 Torx Bit Allen Key	9/16" Wrench or Socket	3/4" Wrench or Socket	Provided Allen Keys

Step 1: Identify the two bolts circled in green on your respective mower, you will use them to install our mounting bracket.

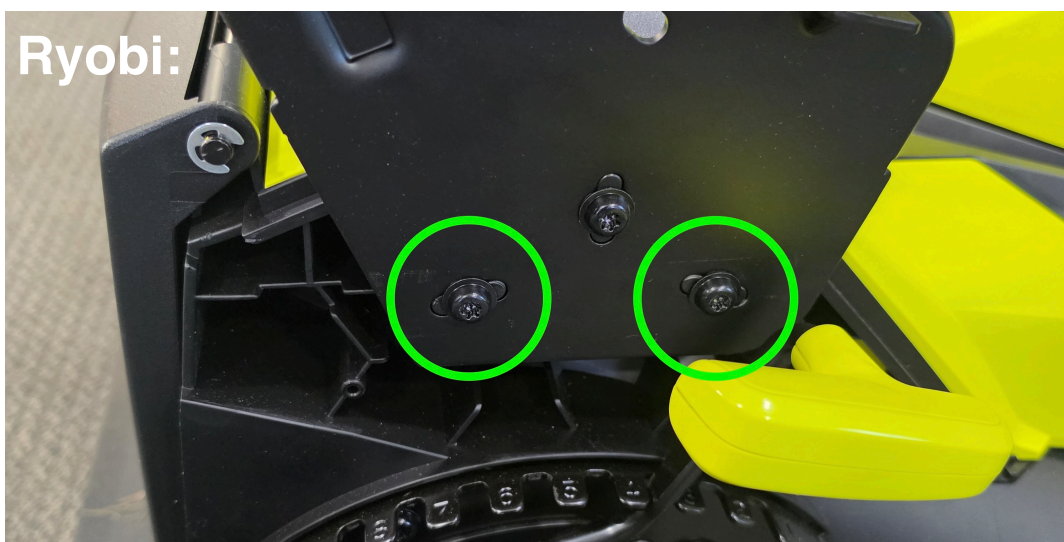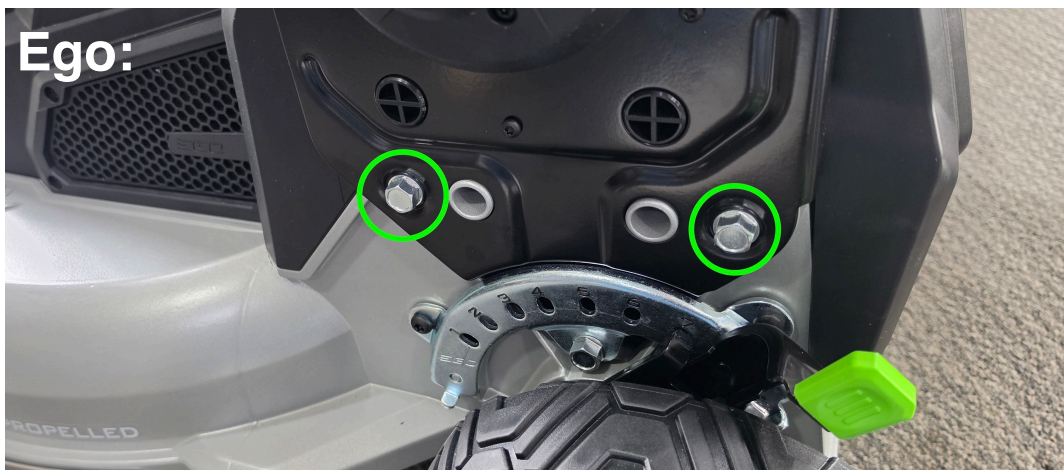

Step 2: Using a 13mm Wrench or Socket on the Ego, and the provided 25 Torx Allen Key on the Ryobi, remove the bolts circled in Green in Step 1.



Step 3: Using the provided M8 Bolts on the Ego, and the OEM bolts on the Ryobi. Bolt our mounting plate to each side of your mower's frame. **The fork side of the plate needs to point towards the front of your mower on each side.**

For Ego only: Place two of the provided flat washers between the mounting plate and your mower's frame on each mounting bolt. Tighten until snug. (do NOT over tighten) When done, it should look like the next page.





US Patent 6,962,039 B2, US Patent 6,993,894 B2




For Ryobi Only: Simply use your mower's existing bolts to secure our mounting plate to your mower, the fork side of the plate should be pointing towards the front of your mower on each side.



Step 4: Assemble your mounting arms. Utilize the Photo below for reference.

Your mounting arms will either be direct bolt, or quick release, depending on what you ordered. The mounting arm below remains the same in either install, the only difference is the pivot arm is replaced by our quick release hook.

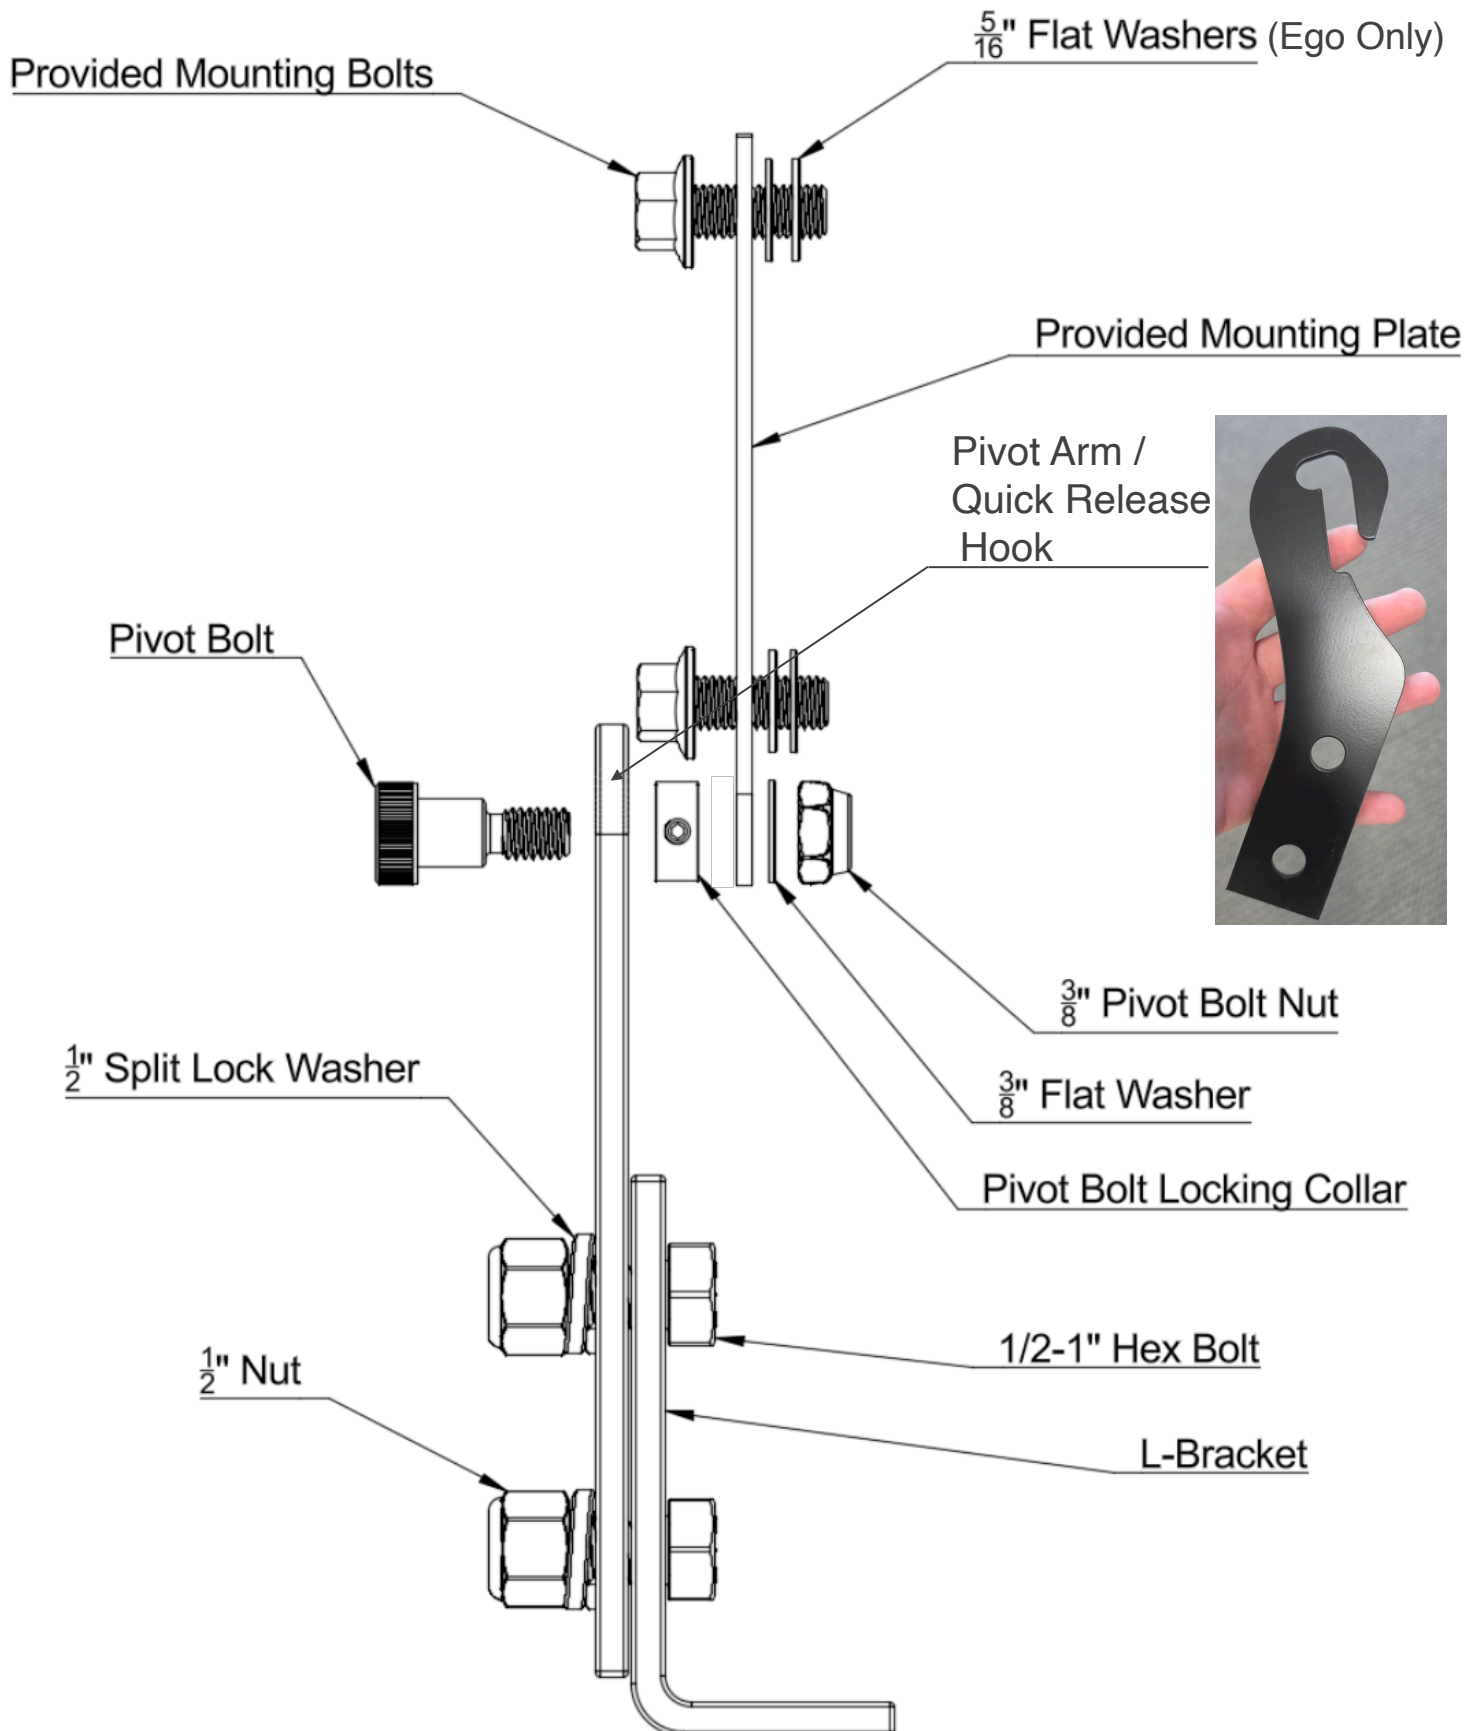

Step 5: Bolt your mounting arms to the mower using the Pivot Bolts or Hang your QR hook (bolted to the L-bracket) on the Pivot Bolts, then bolt the mounting arms to your striper.

NOTE: channel nuts slide to any point in the striper's channel when loosened, you will need to move them to accommodate your install.

How the install will look with the Bolt On:



How the install will look with the QR Hook:





US Patent 6,962,039 B2, US Patent 6,993,894 B2

Final Steps

Check installation, pick up the roller to confirm it freely pivots up and down. Also reinstall bagger to mower if desired.



Installation is now complete! Enjoy striping with your new CheckMate™ Striping kit!

If you have any questions or concerns, feel free to reach out to us!

Phone: (800) 411-0150

Email: sales@bigleaguelawns.com