



CheckMate™ Lawn and Athletic Field Striping Kits

1125 Mak-Tech Dr. Suite C



Lansing, MI 48906



800.411.0150

www.bigleaguelawns.com



CheckMate™ Lawn Striping Kit For Gravely Pro-QXT Installation Guide

Important

Big League Lawns, LLC warrants their products to be free of defects in material and workmanship. This warranty does not cover defects due directly or indirectly to misuse, abuse, normal wear and tear, failure to properly maintain the product or used for a purpose other than that for which it is intended. The duration of this warranty is expressly limited to one year parts and labor beginning from the date of delivery to the original customer.


The obligation of Big League Lawns, LLC is limited solely to the repair or replacement, at our option, at its factory or authorized repair agent of any part that should prove deficient. Purchaser must maintain the product under normal operating conditions at all times. Prior to operation, become familiar with the attachment and any disconnect features. This product is not intended to be used in a transport position or to be backed over curbs. When not in use, the product should be removed from the mower and transported in a safe manner. Failure to follow these instructions will void the warranty.



US Patent 6,962,039 B2, US Patent 6,993,894 B2

Mounting Instructions Gravely Pro-QXT Mower

Congratulations on your new purchase! You are just steps away from creating a beautifully patterned lawn using your new CheckMate™ lawn stripping roller. To ensure a long life of both your mower and roller, please be sure to follow the mounting recommendations below.

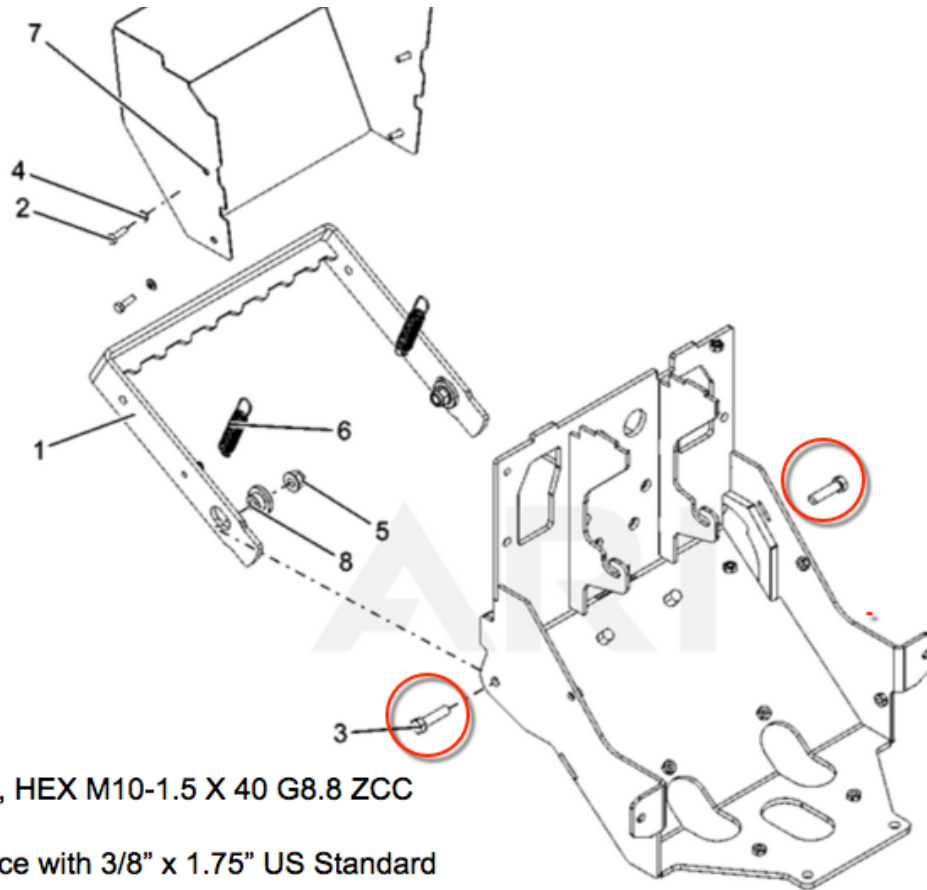

Tools Required:

1/2" Wrench	1/4" Allen Wrench

Directions

Unit is shipped with two 3/8" x 1.75" Standard Bolts and 3/8" to 3/8" Coupler Nuts. To install, you must replace the noted bolt (circled) on each side of your mower with the provided standard 3/8" bolts, install them so that the threads point outward towards the tires.

You will then secure the bolt by attaching the 3/8" coupler nut. The opposite end of the coupler nut will have the 3/8" threads necessary to connect the CheckMate™ Pivot bolts. This allows for a no drill application.

Sample Coupling Process

(1) Acquire Hole



(2) Install bolt



(3) Add lock washer



(4) Tighten coupler nut



(5) Thread pivot bolt



(6) Tighten pivot bolt

